 
 
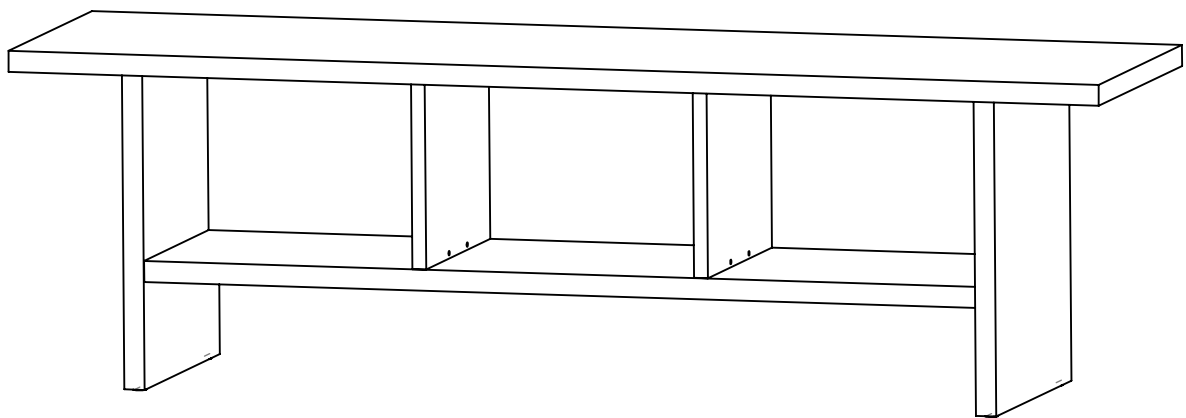 
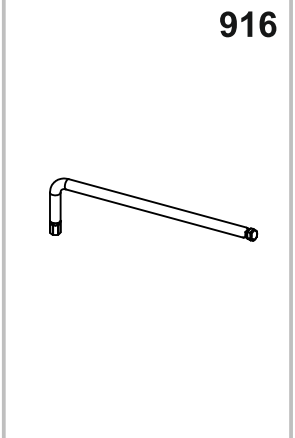 
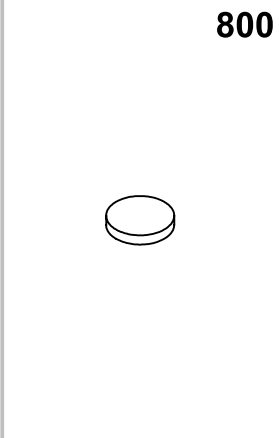 
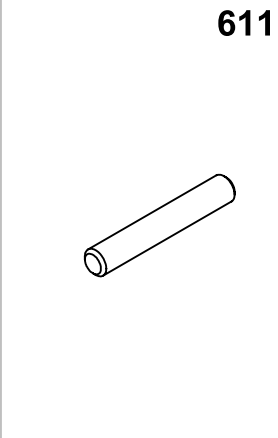 
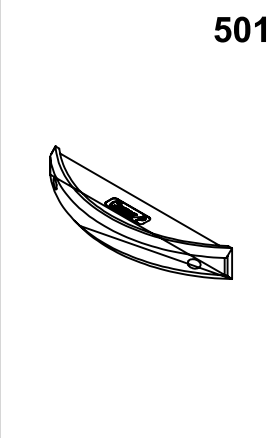 
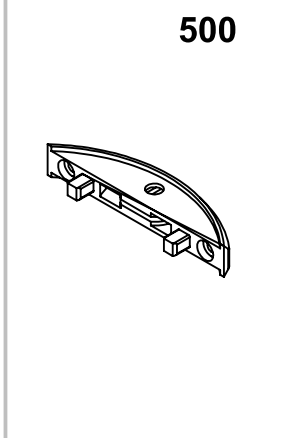 
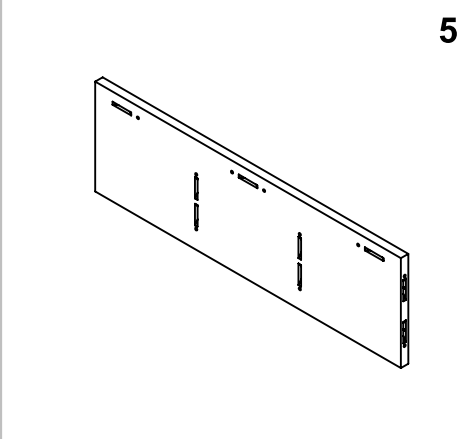 
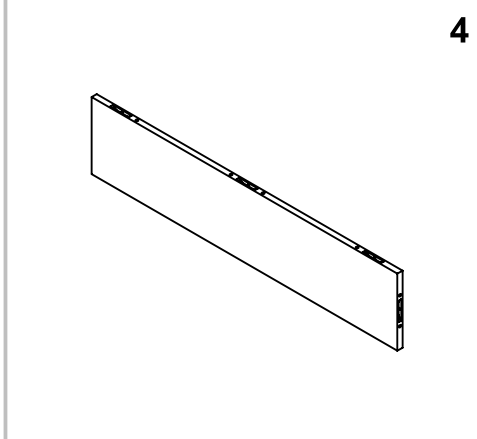 
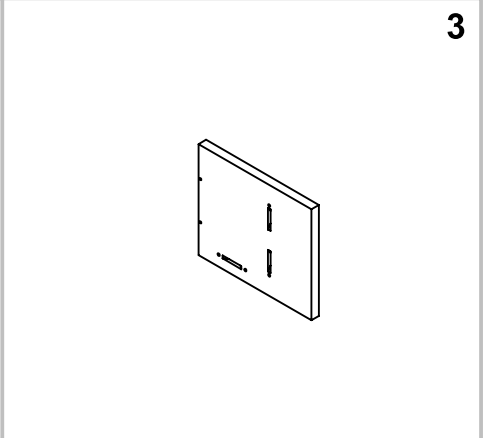 
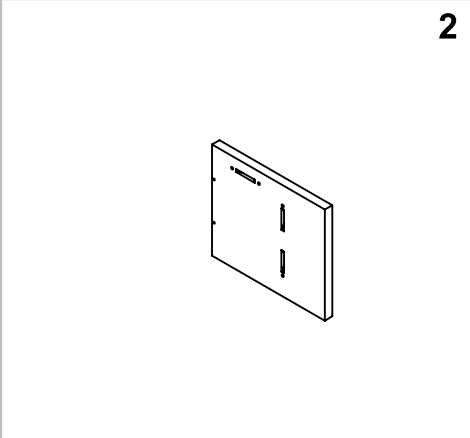 



Montageanleitung für Sitzbank

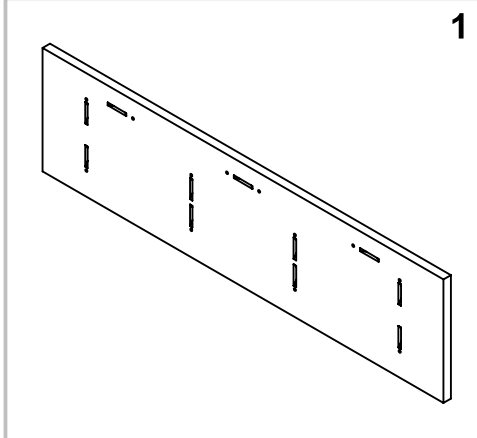

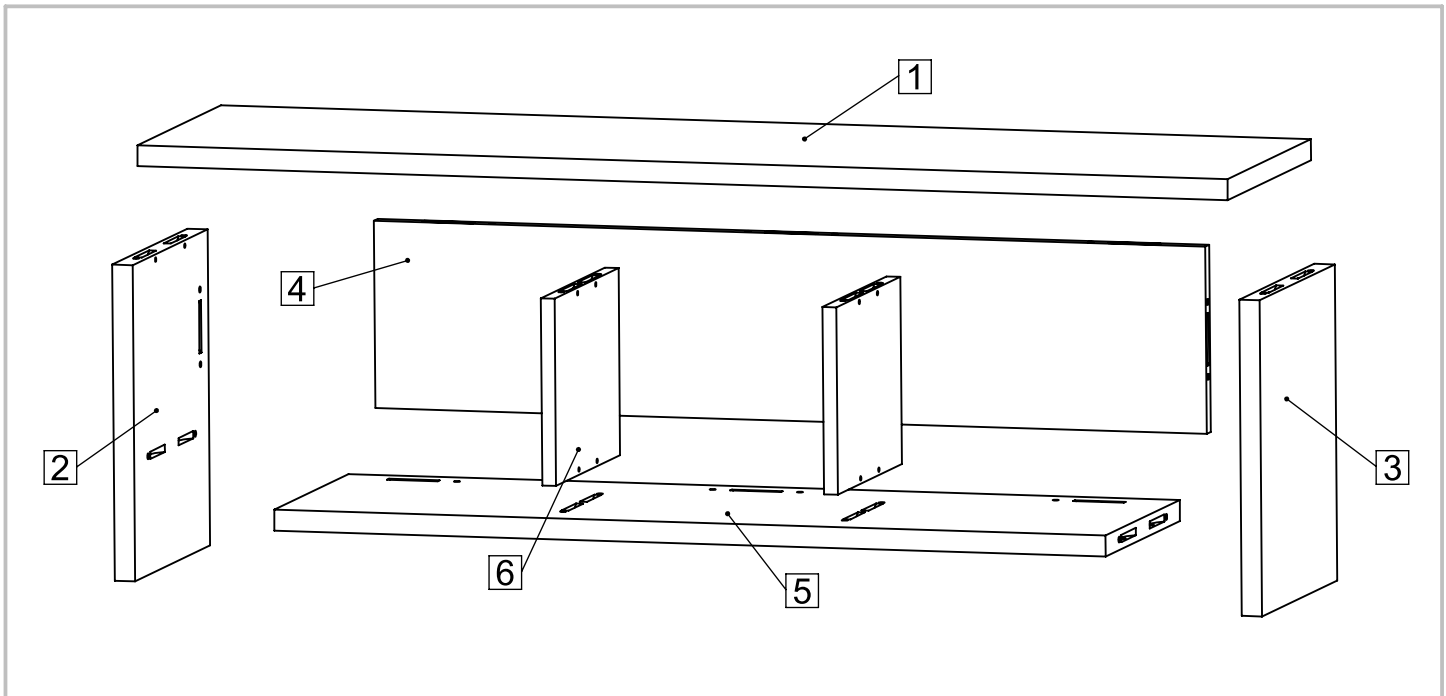


1.

 
5

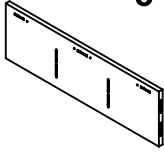



500

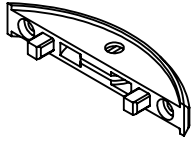 


501

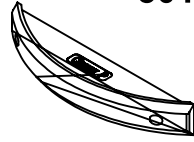 


611

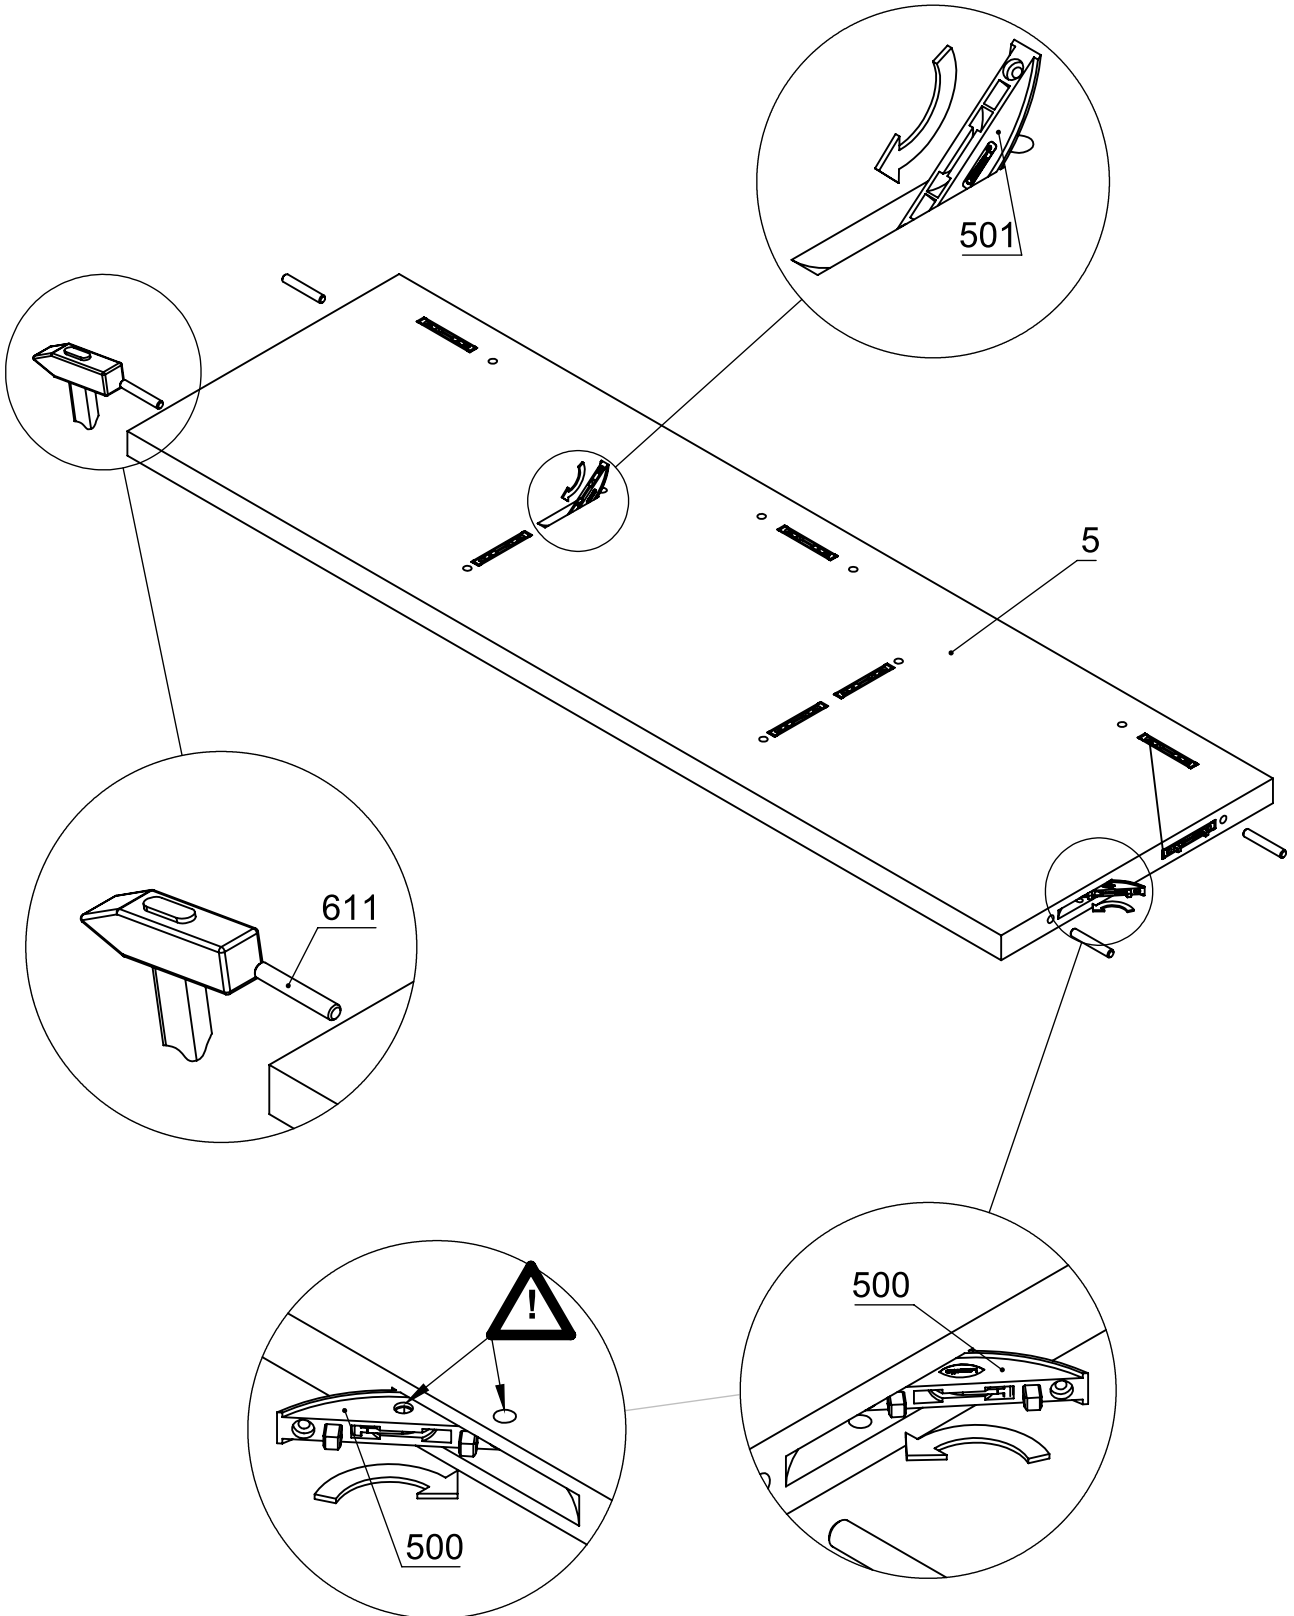  

 
2.

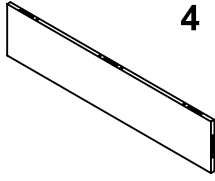



4

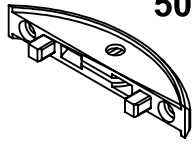 

500



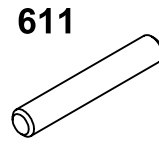 


611

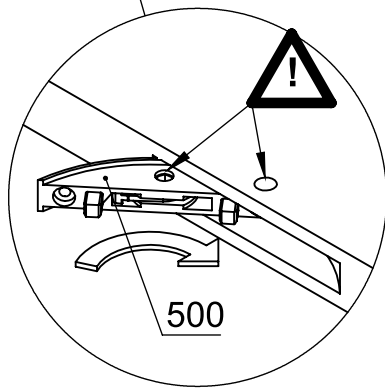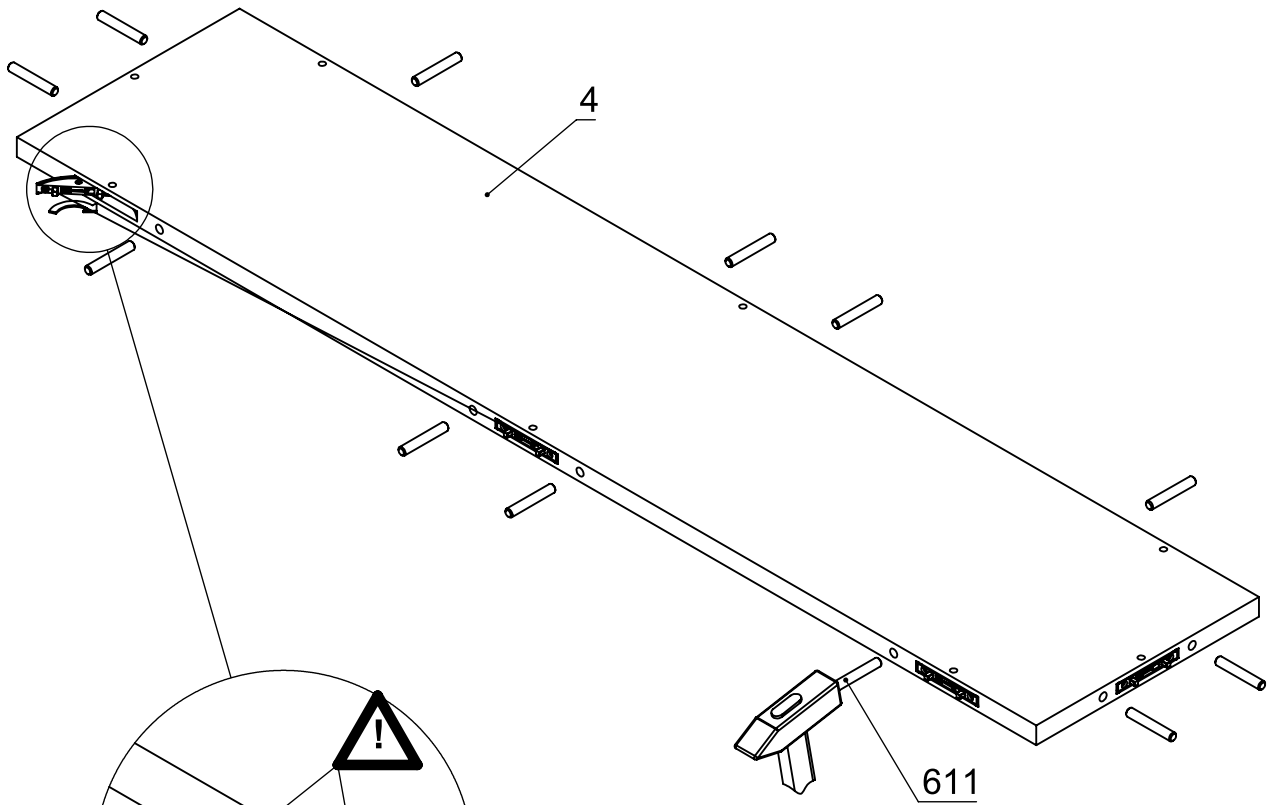  


500

   
3.

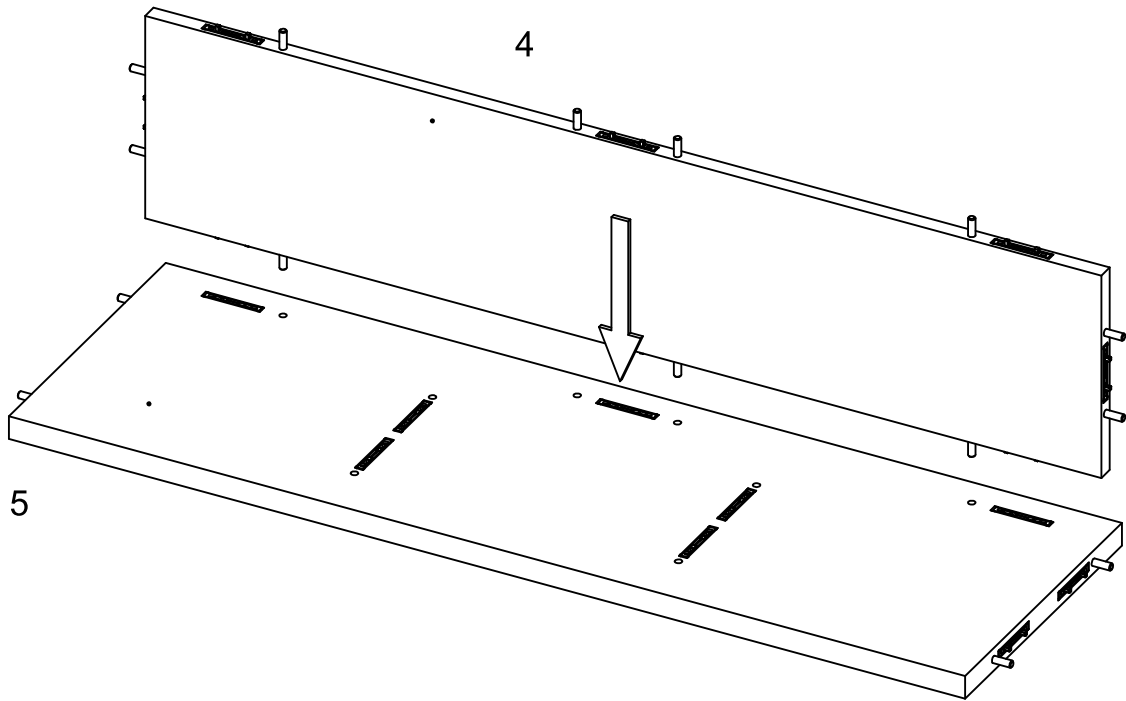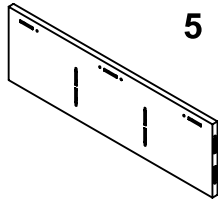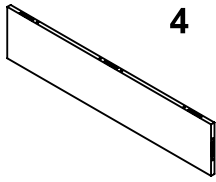

 
4.

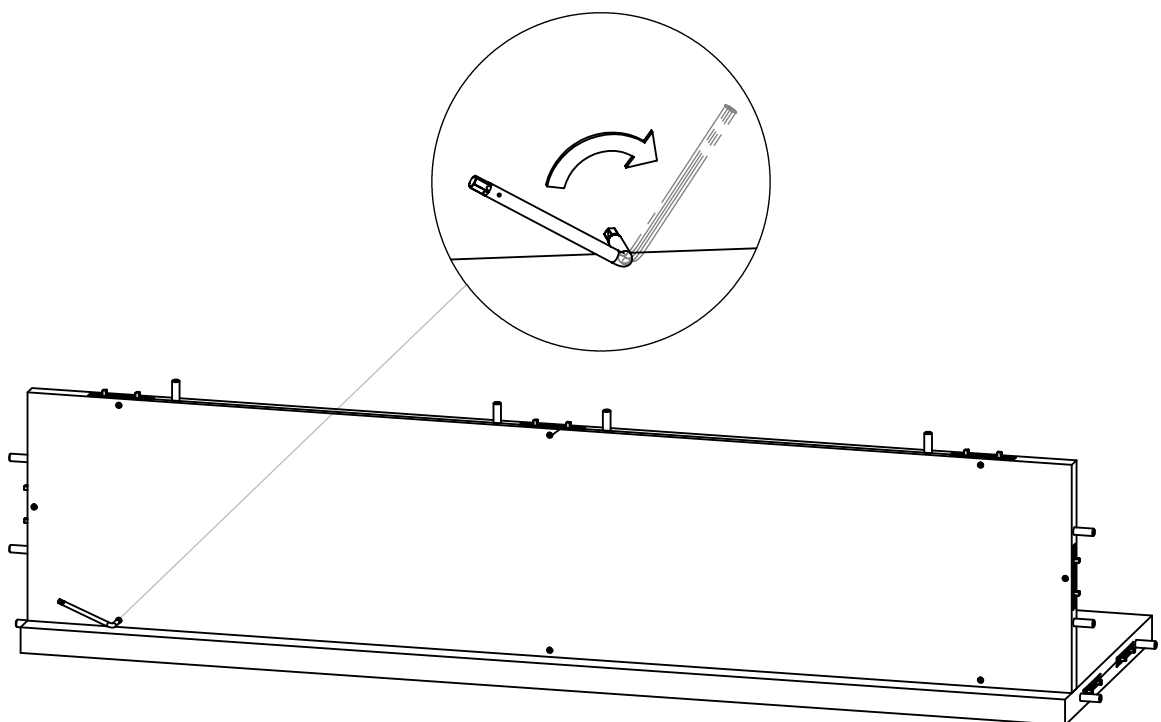

 
5.

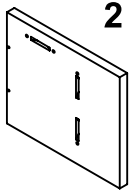


2

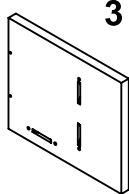 


3

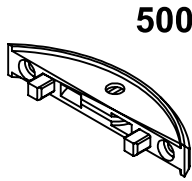 

500

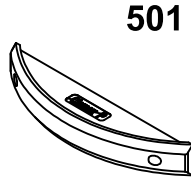 


501

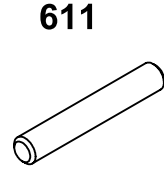 






611



 800


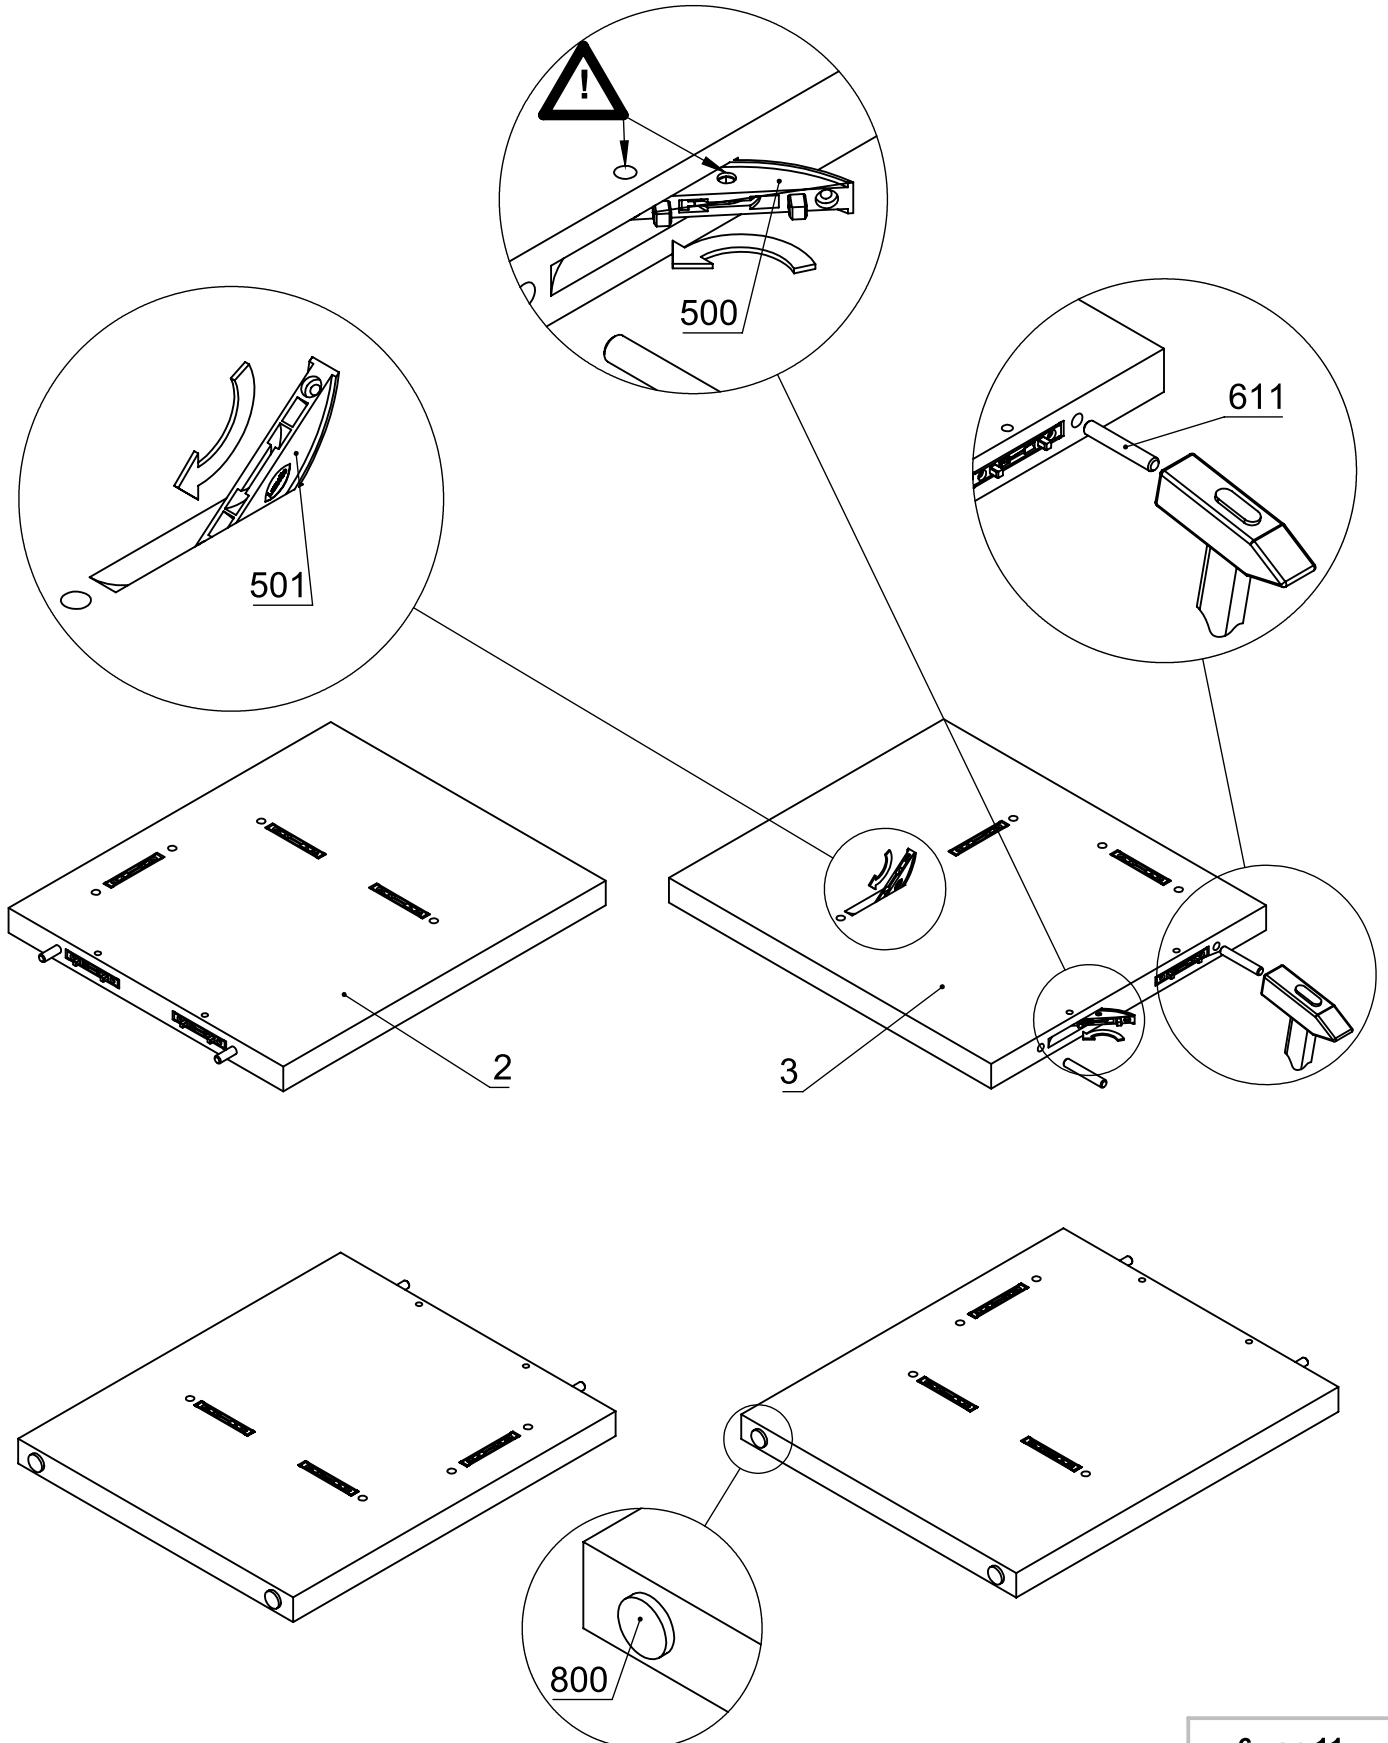


     6.

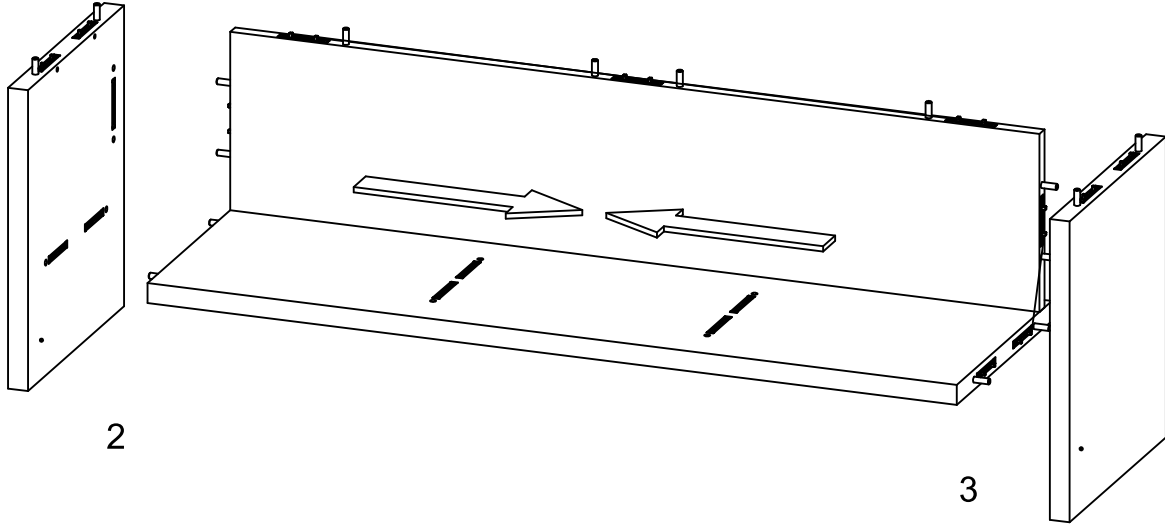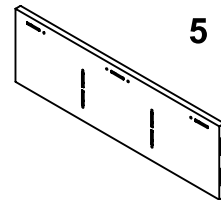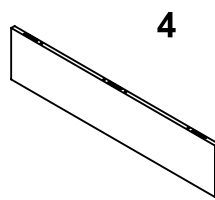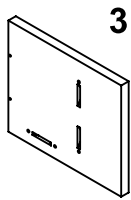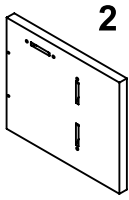


7.

  
916

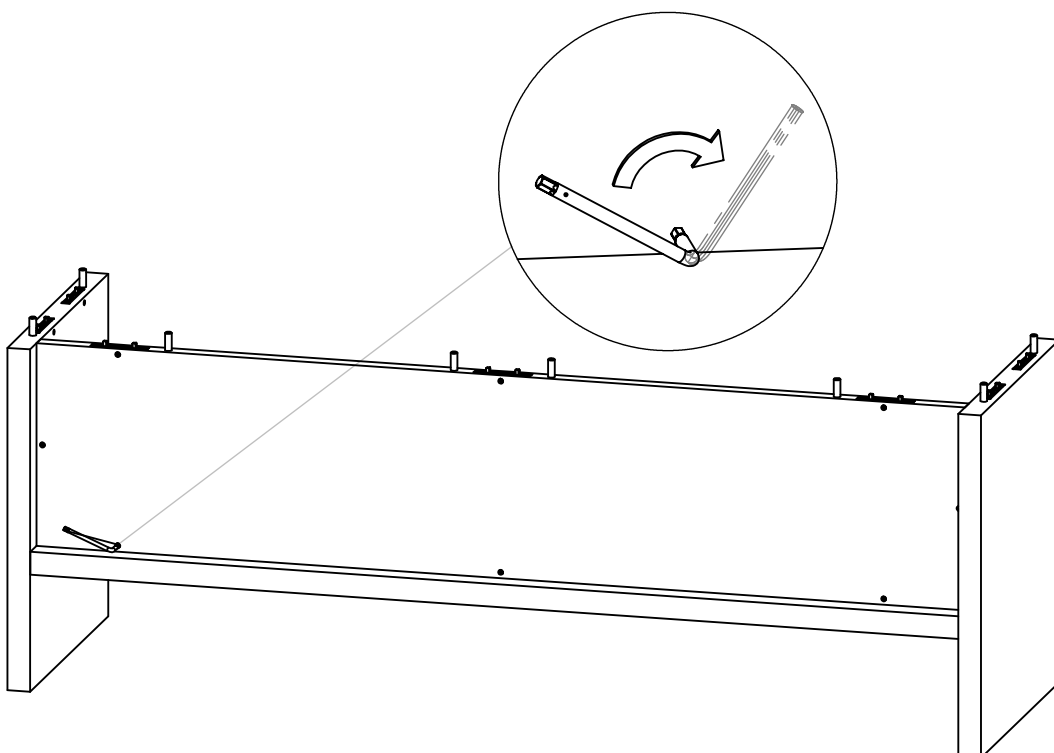

 
8.



6

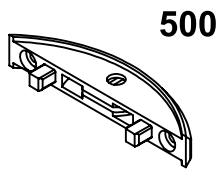 


500

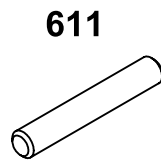 

611





 Die Anzahl dieser Position ist davon abhängig, wie die Sitzbank konfiguriert wurde.

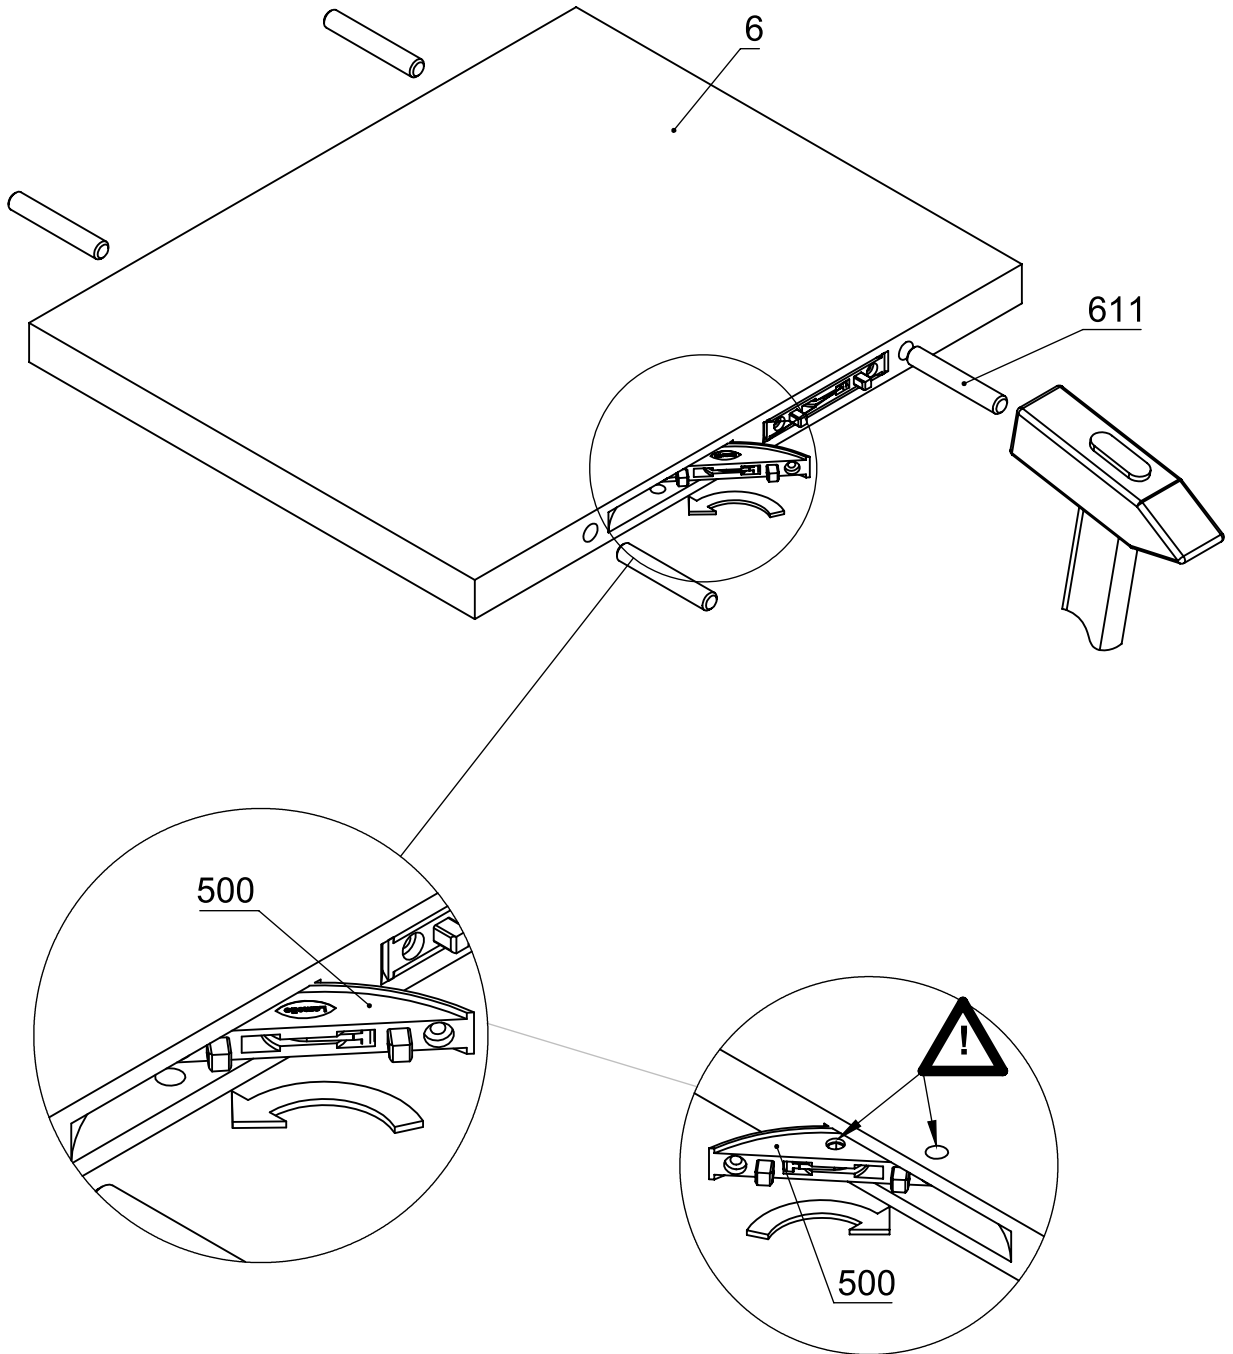



9.

  6


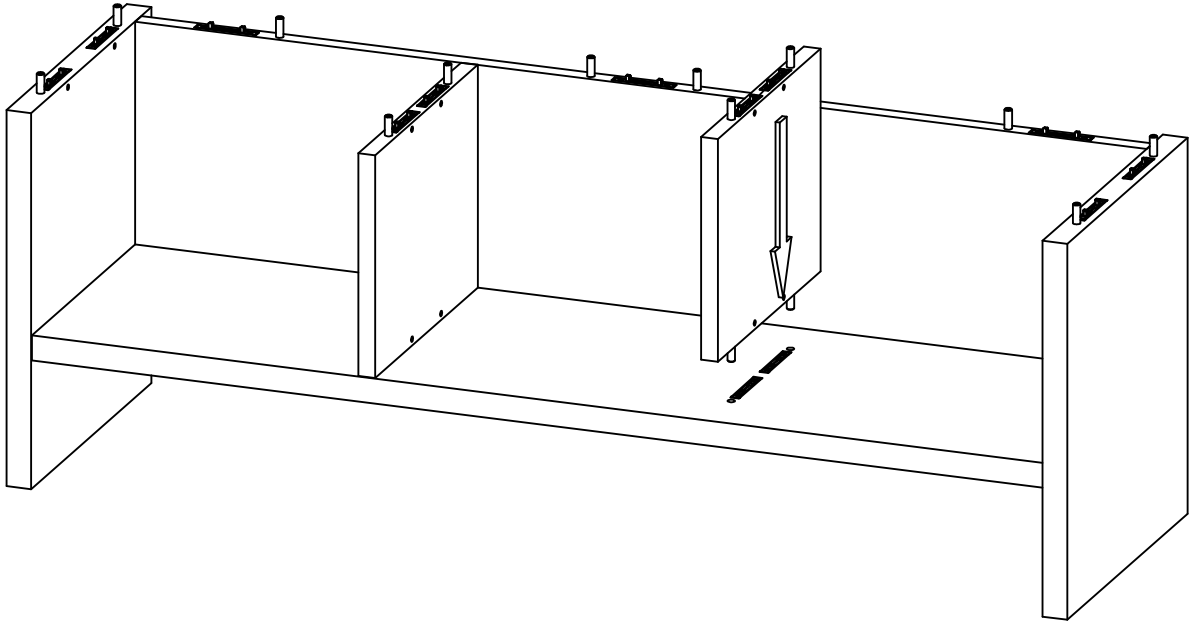



10.

  
916

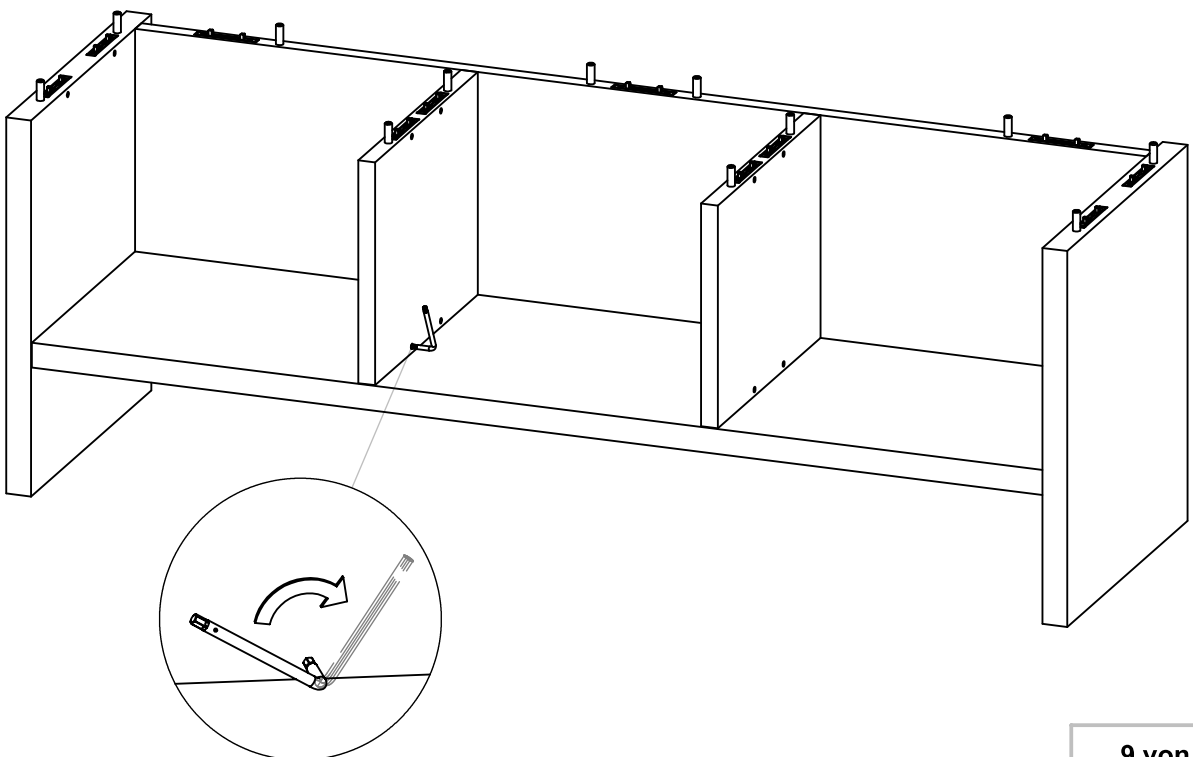

   
11.

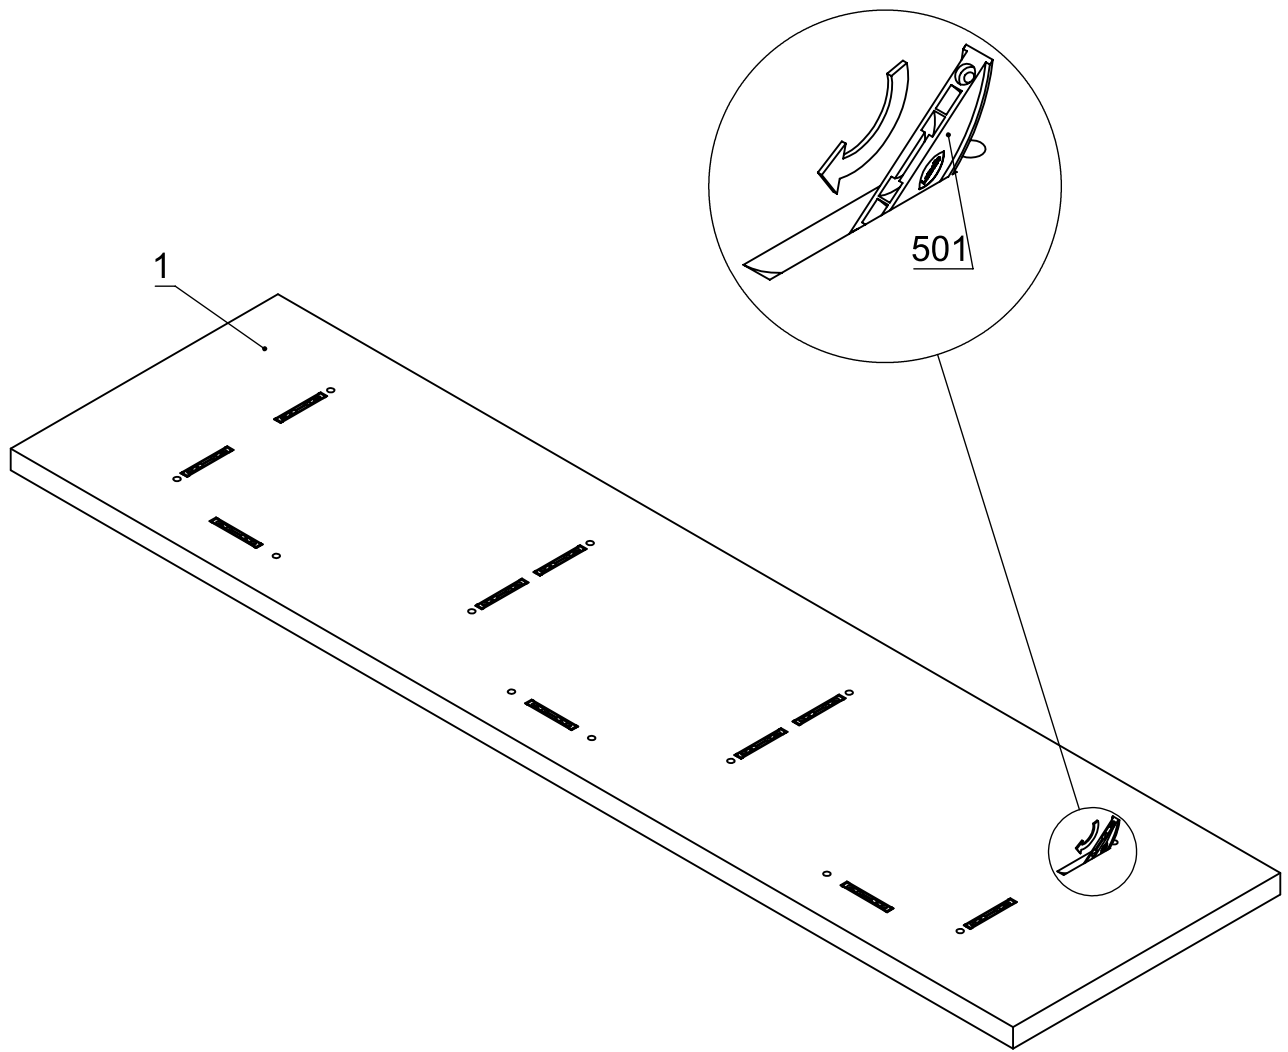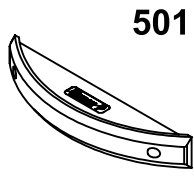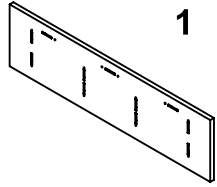

 
12.

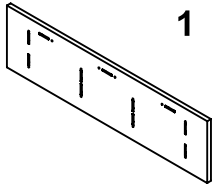


1

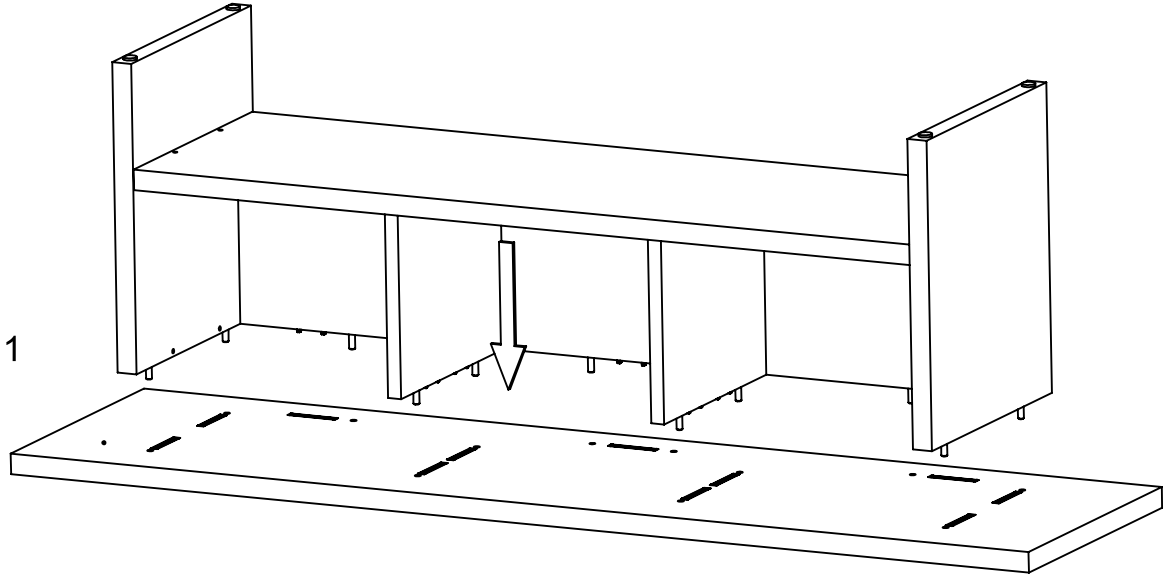 

 13.



916

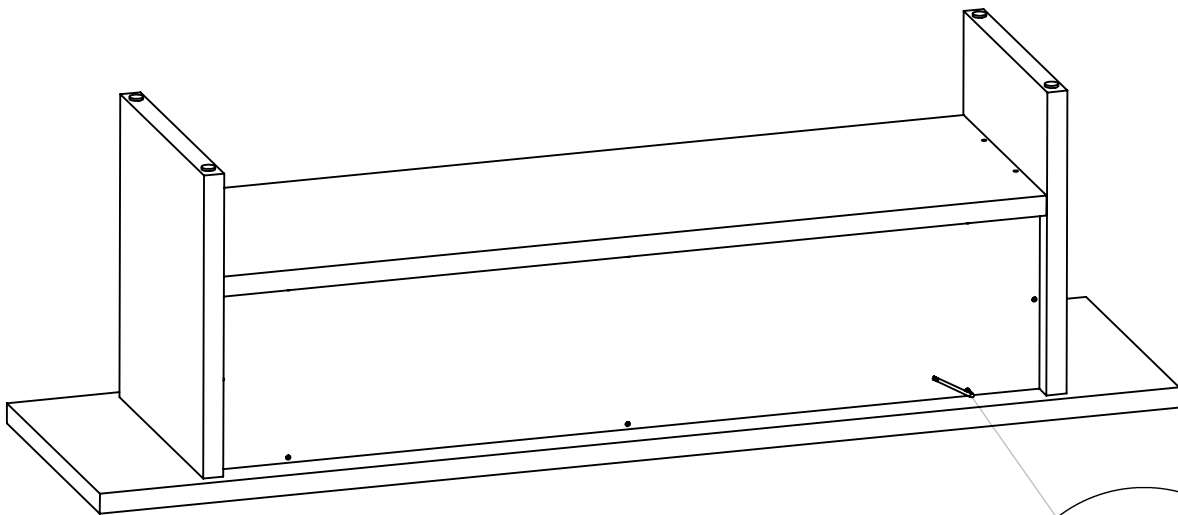 

14.

