

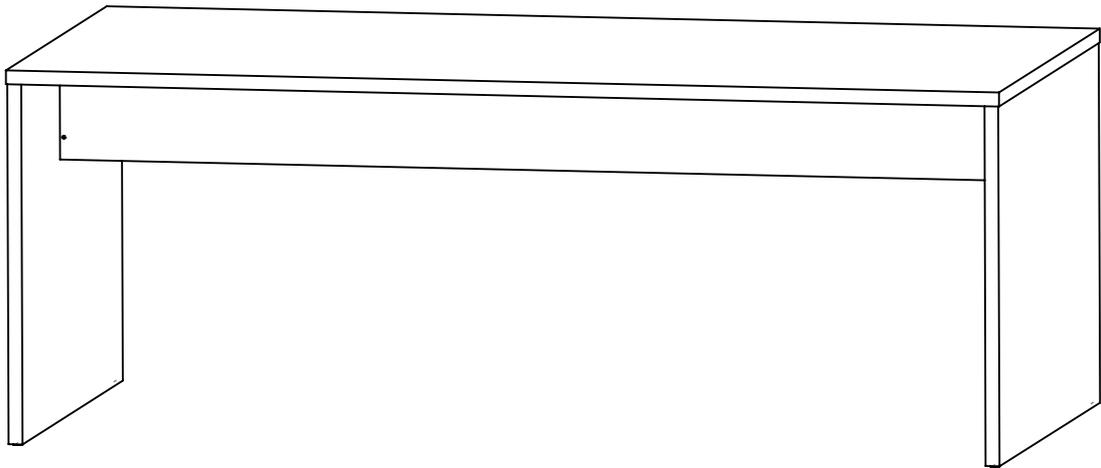



Montageanleitung für Esstisch

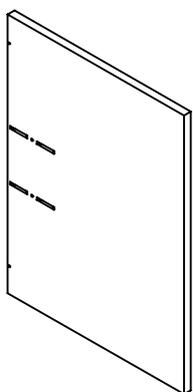


ETI-REC-SPF-10003

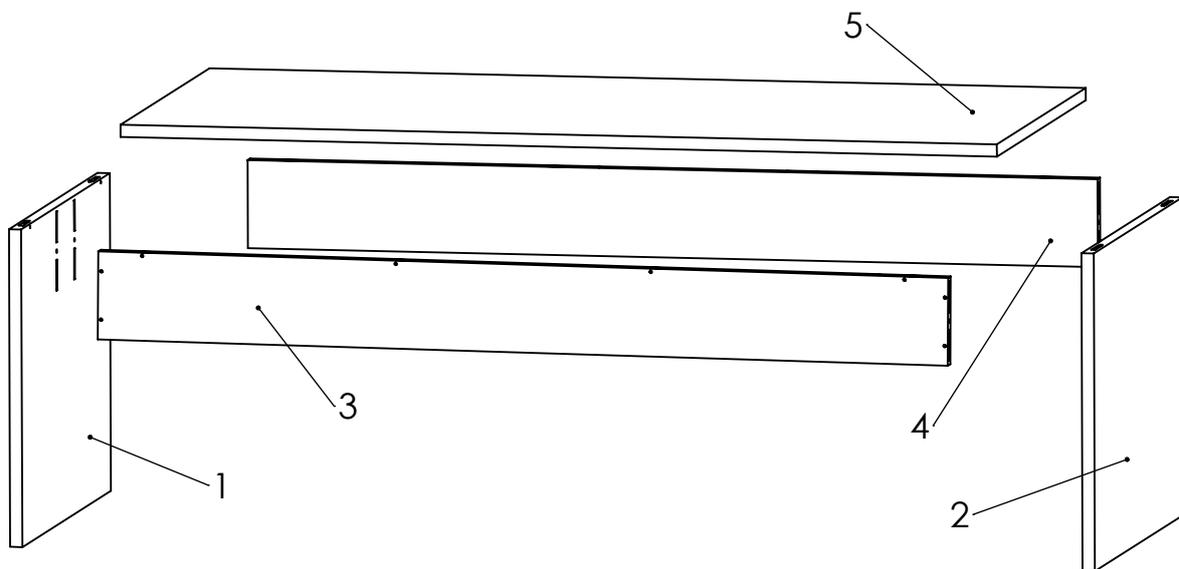


1

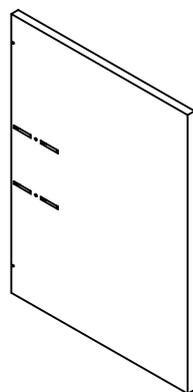


2

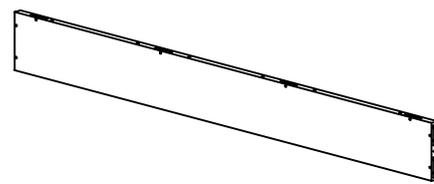


3

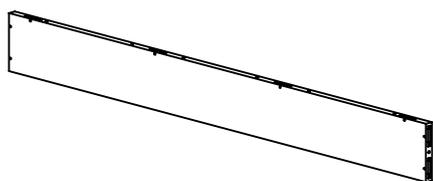


4

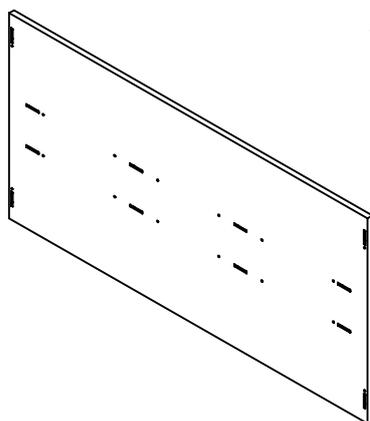


5

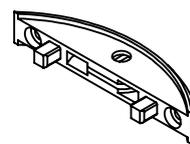

500

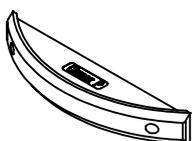


501



611



800

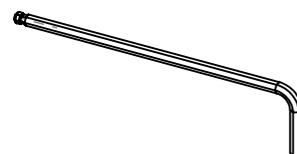







916

1.


3 & 4

500

611

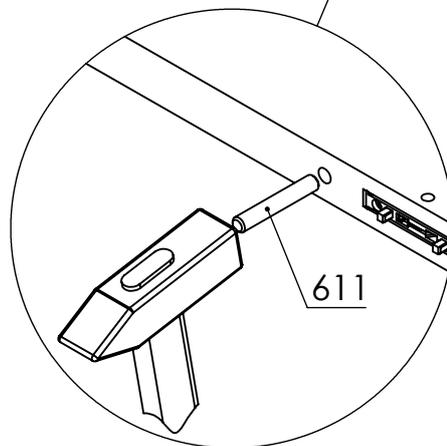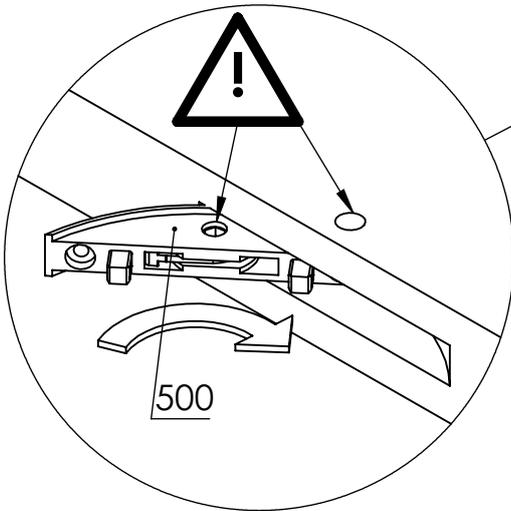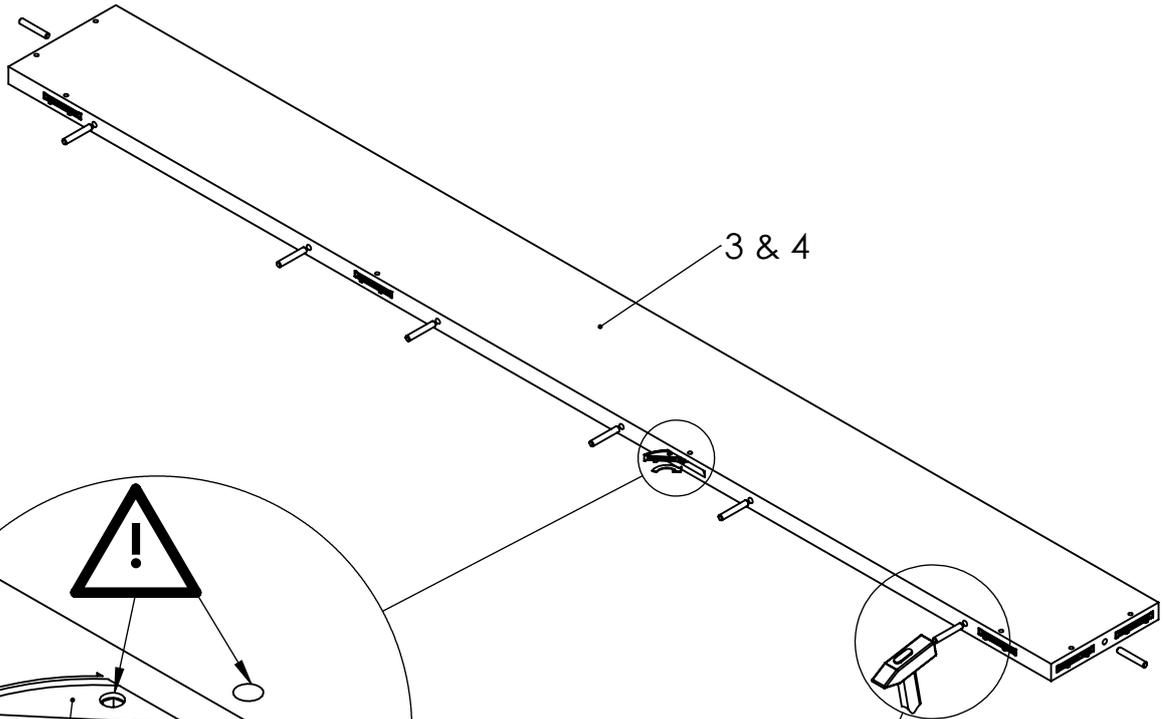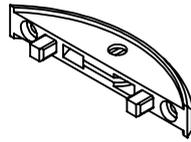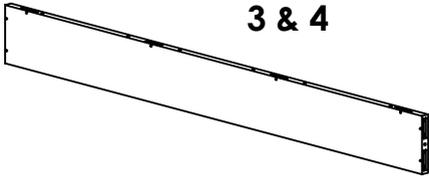


2.



1




2

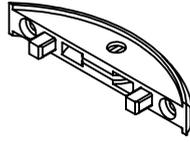


500




501




611

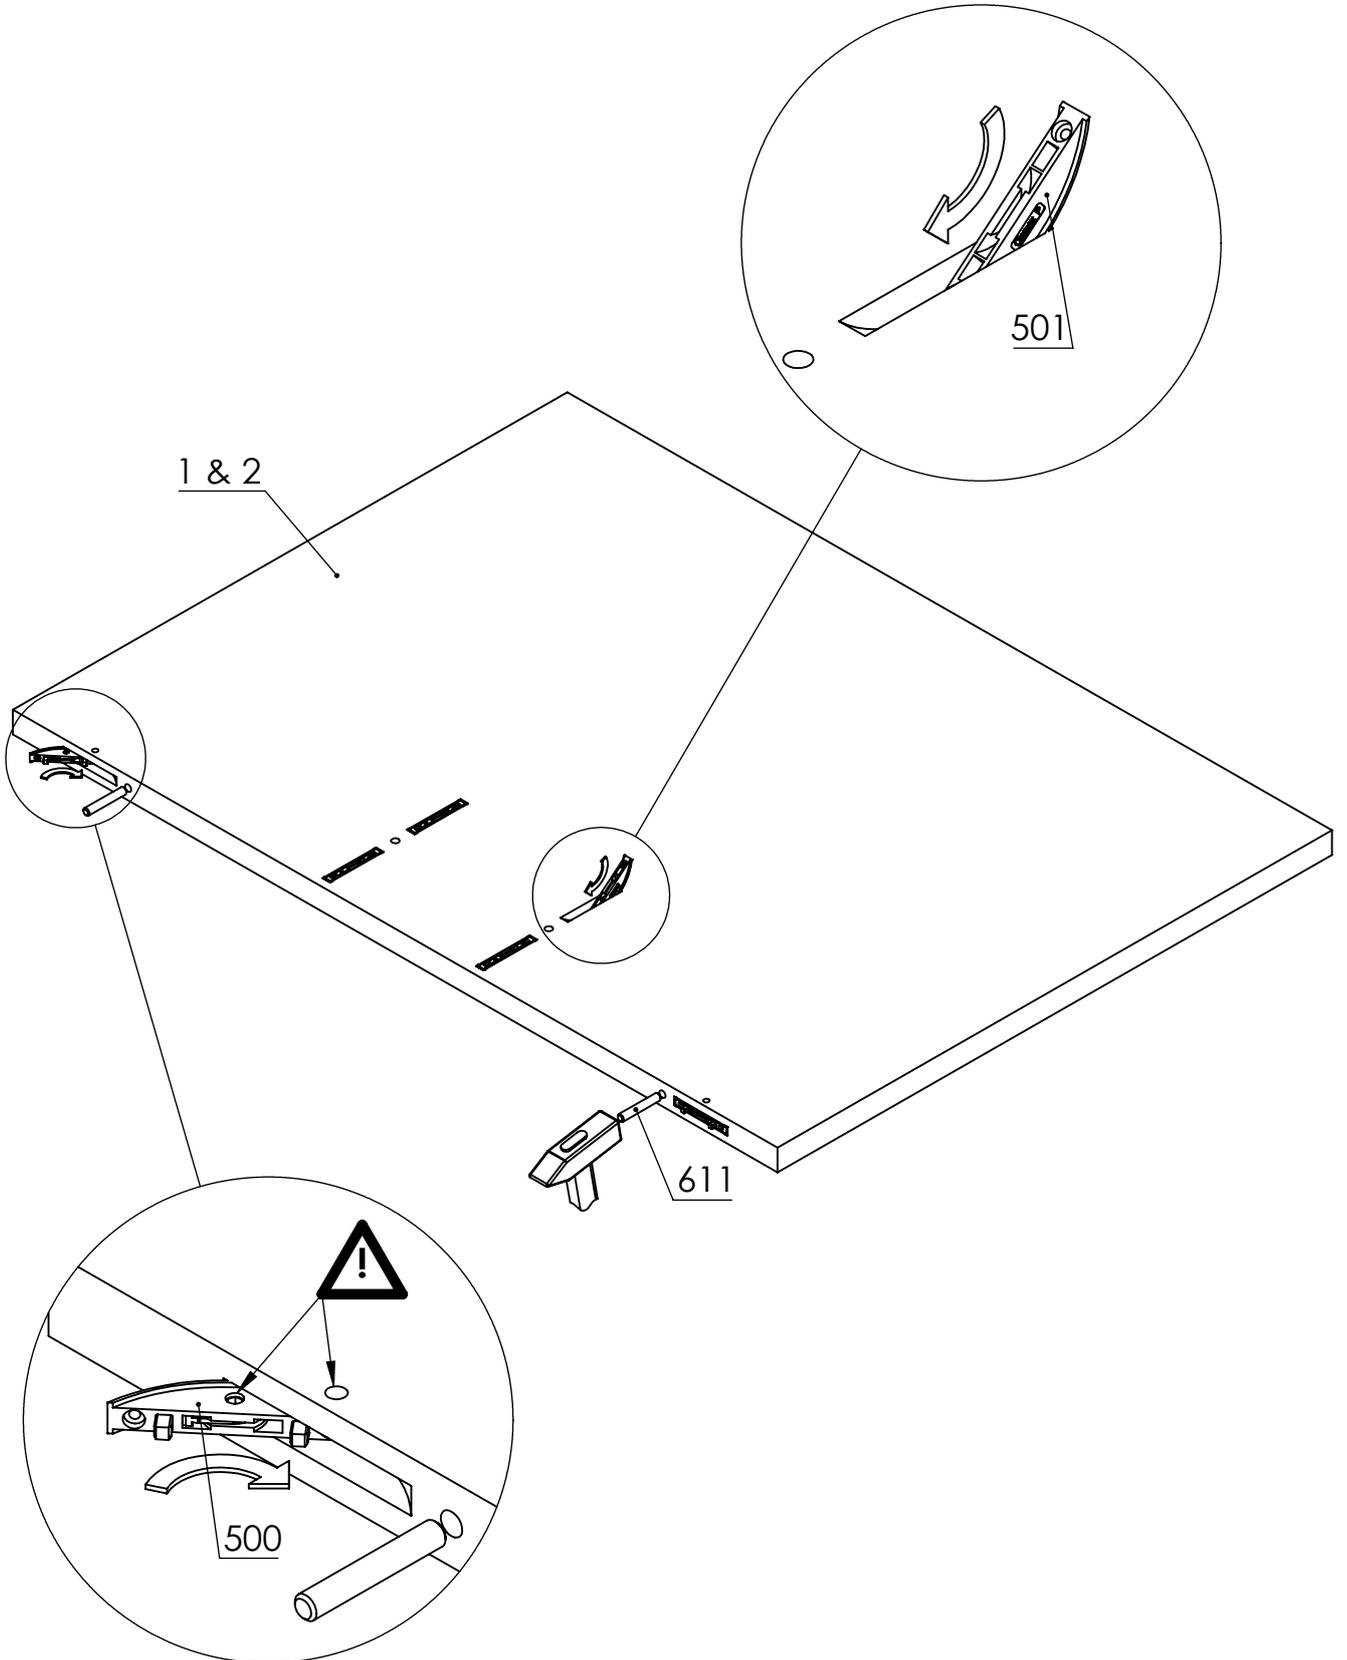


3.

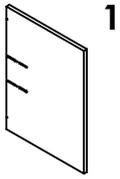


1

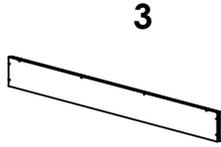


3

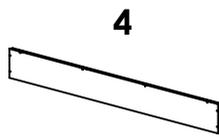


4

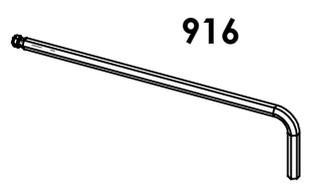


916

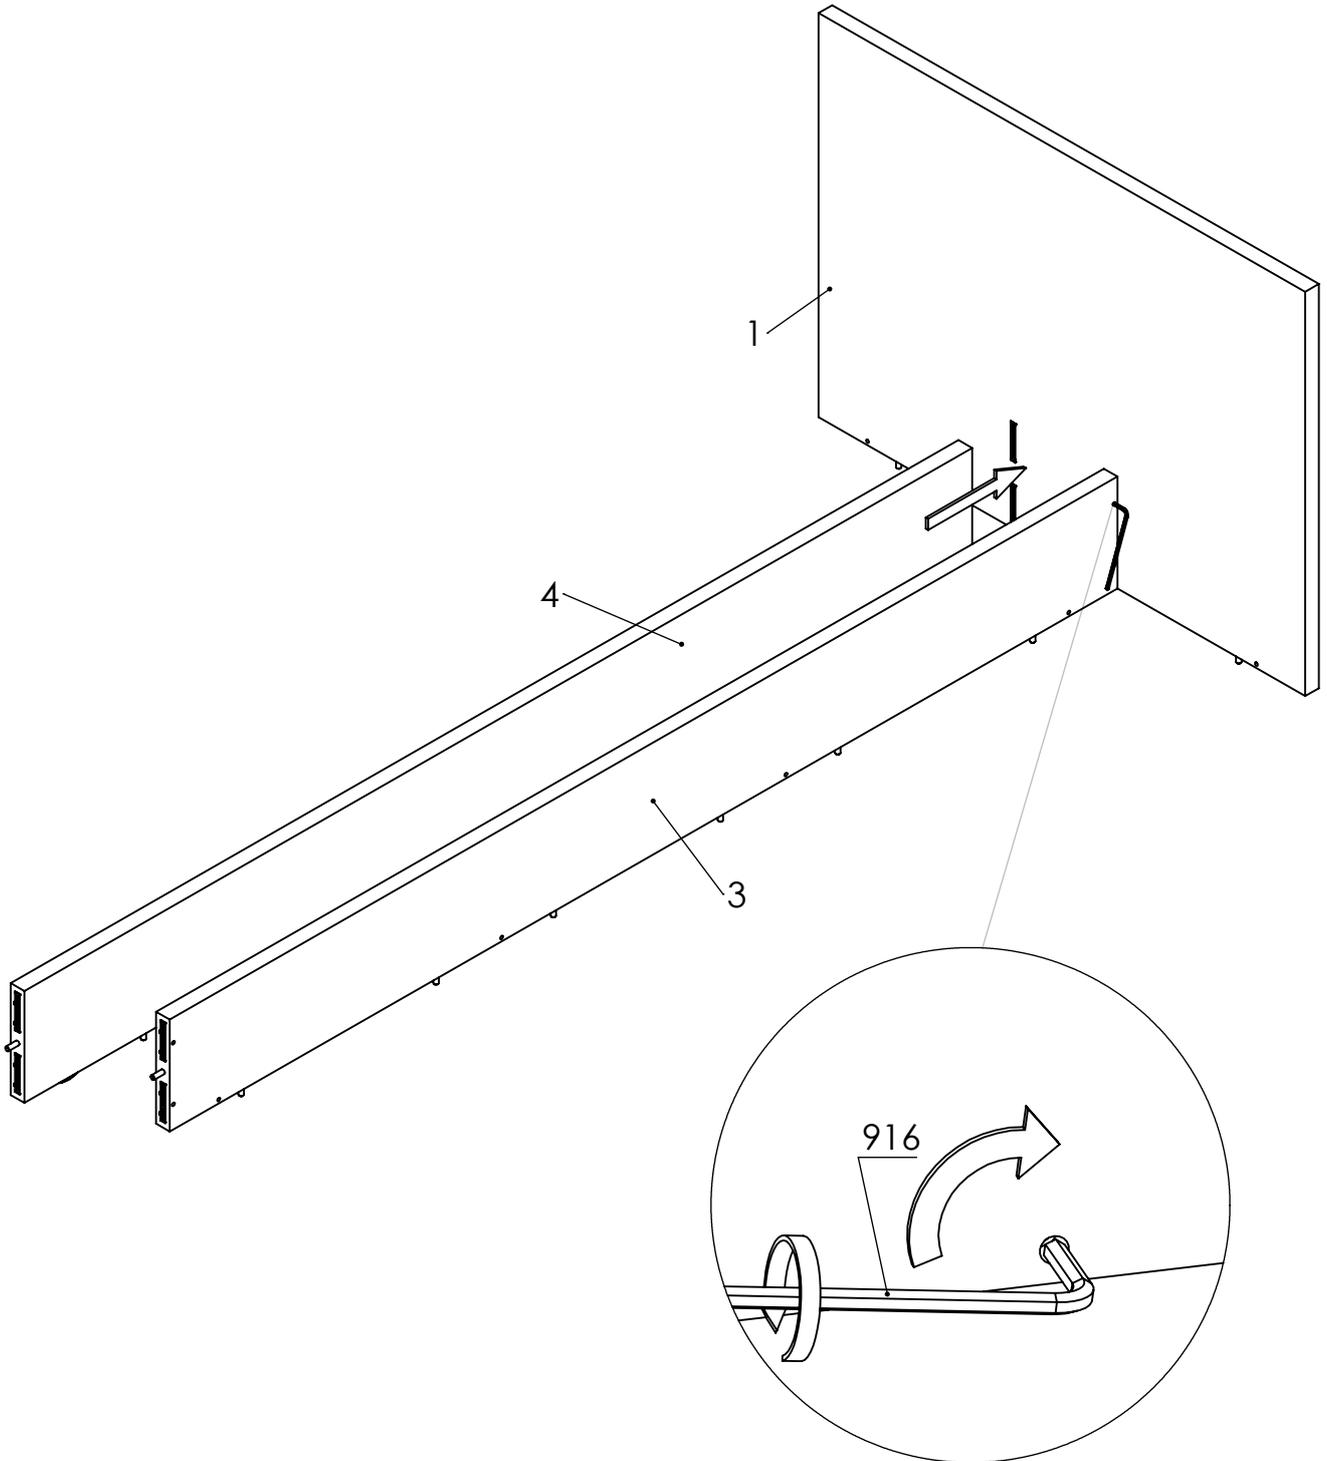




4.




2

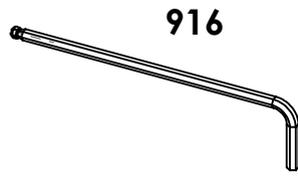


916

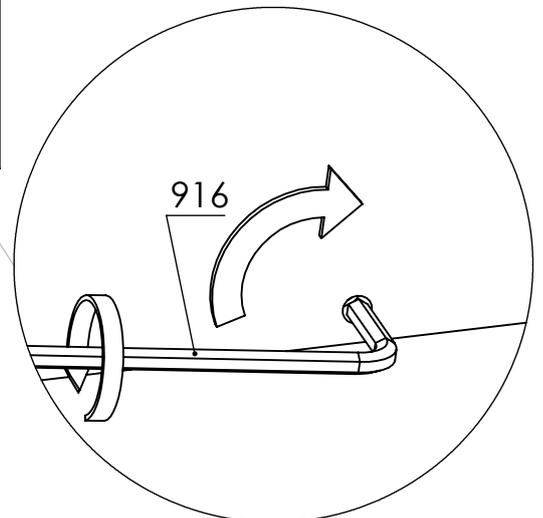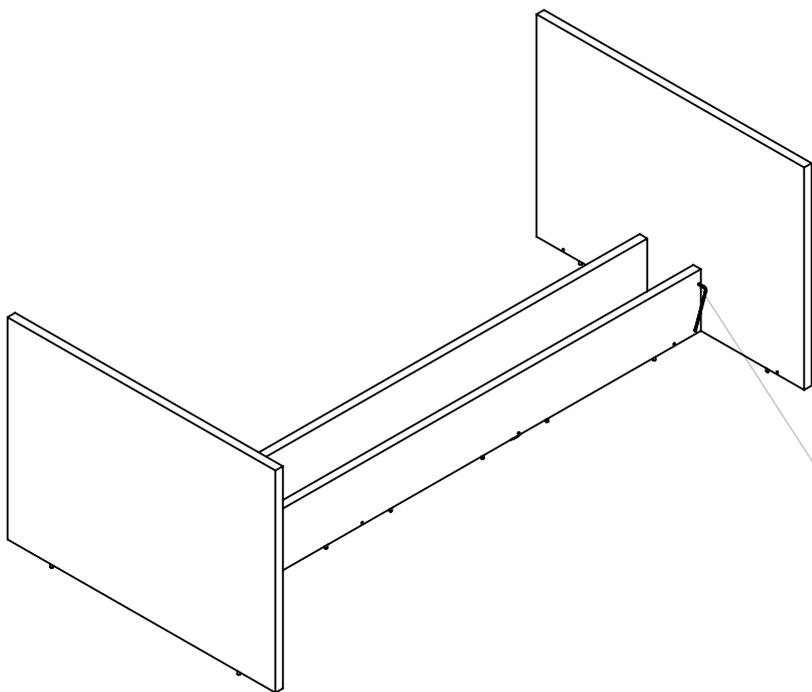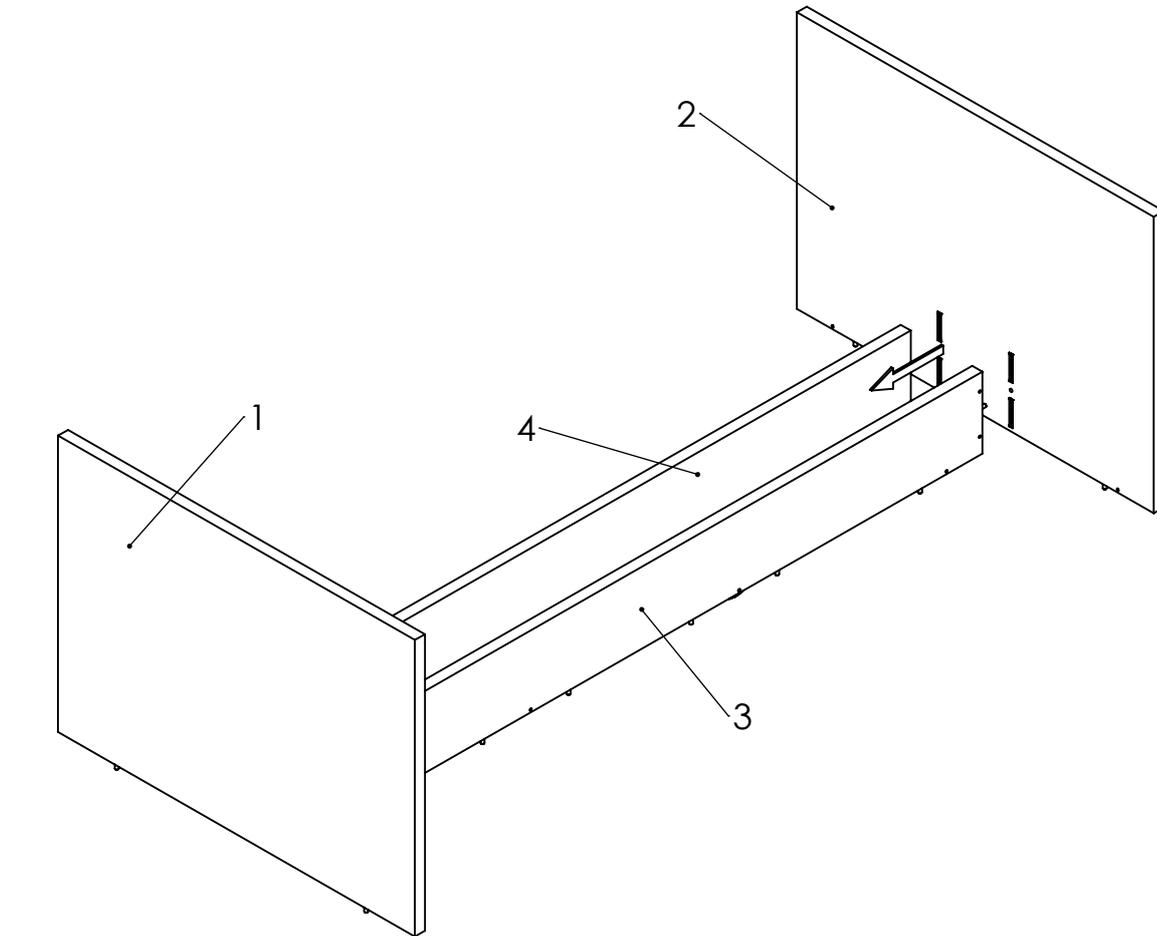


5.

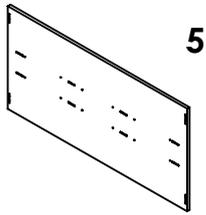


5

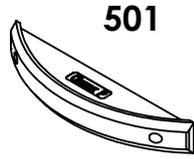

501


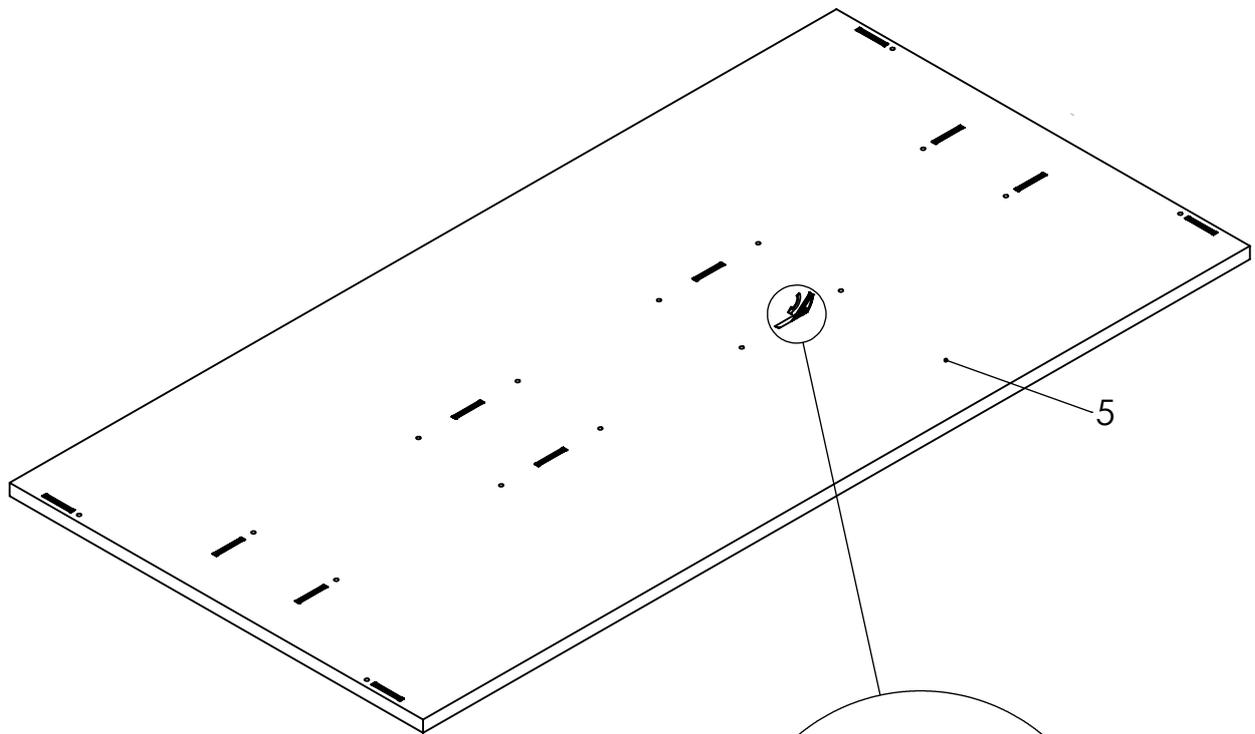


5

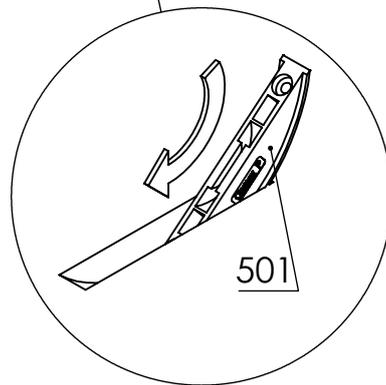


501

6.

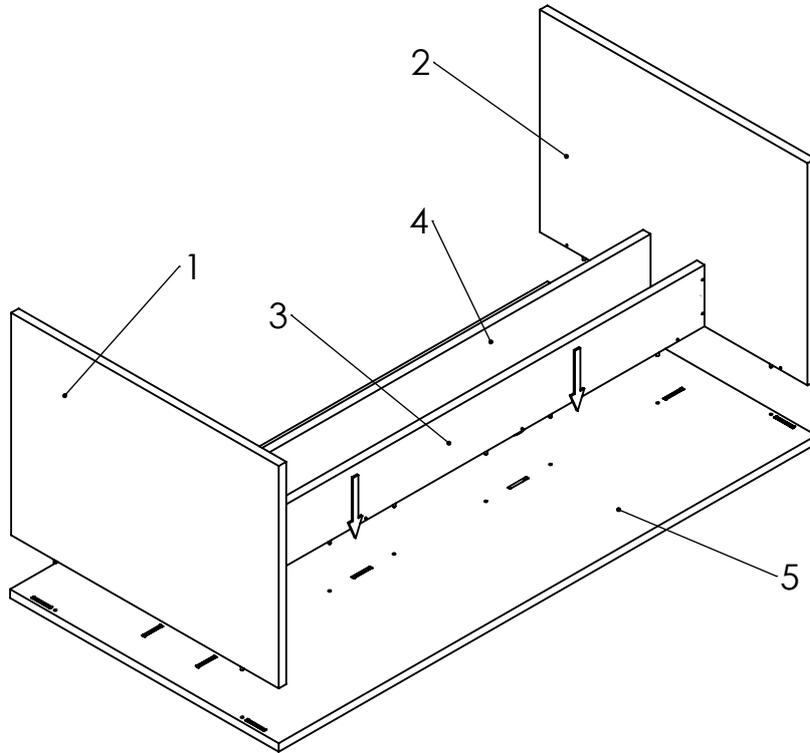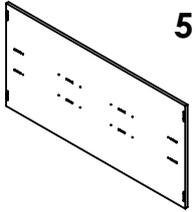

7.

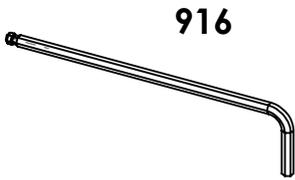

800

