




Montageanleitung für Konferenztisch

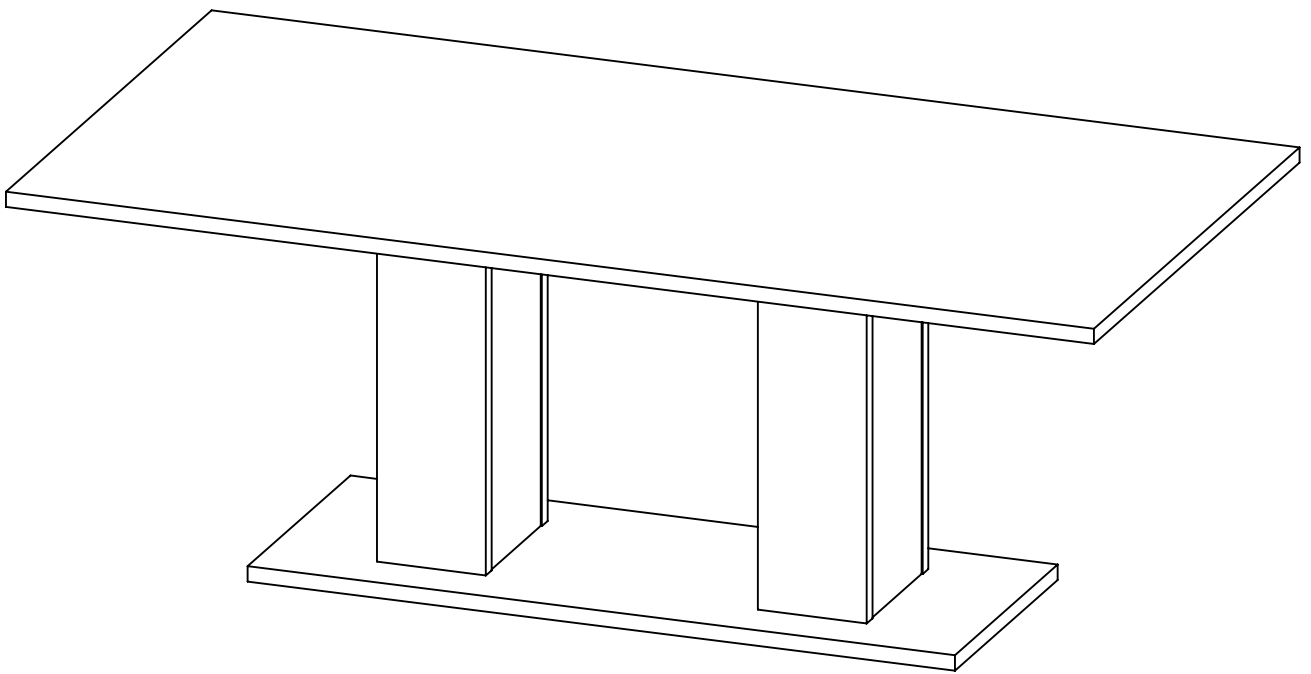


KON-REC-SAU-10001

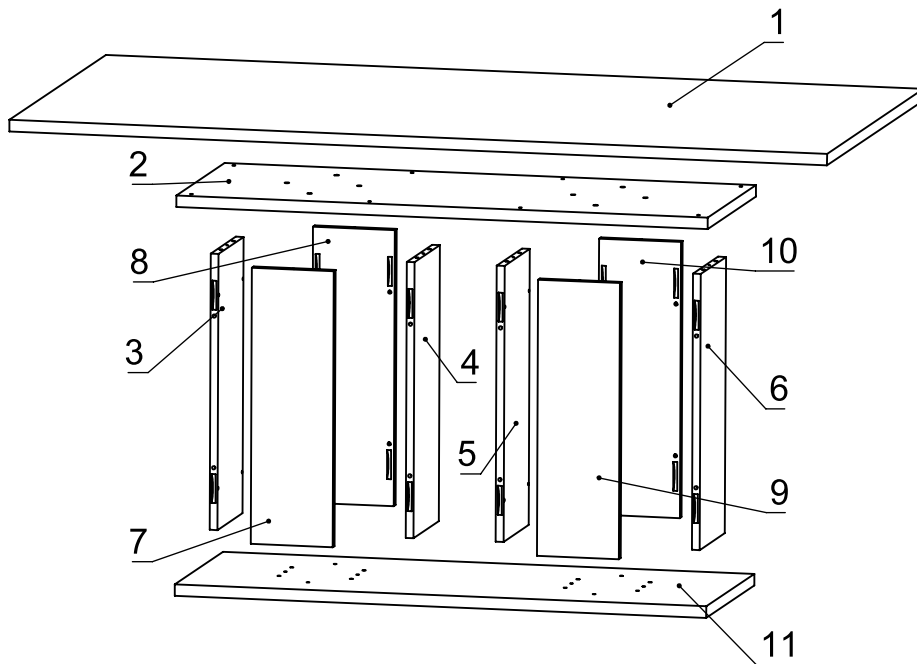

1

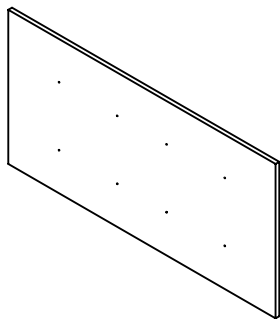

2

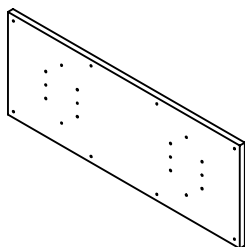


3 - 6




7 - 10




11

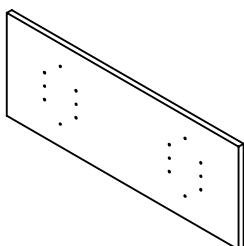


500

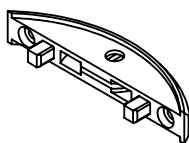


501

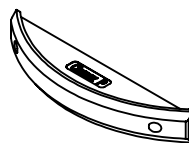


504
7 x 50

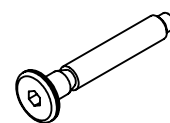


508
7 x 60

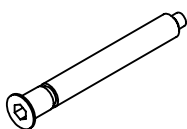

609
8 x 40

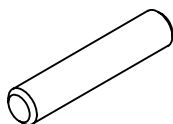

611
8 x 50

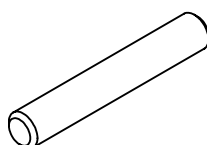

801




916



1.




3 - 6


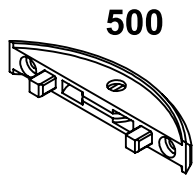


500

609
8 x 40

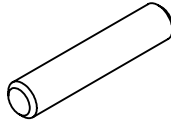


611
8 x 50

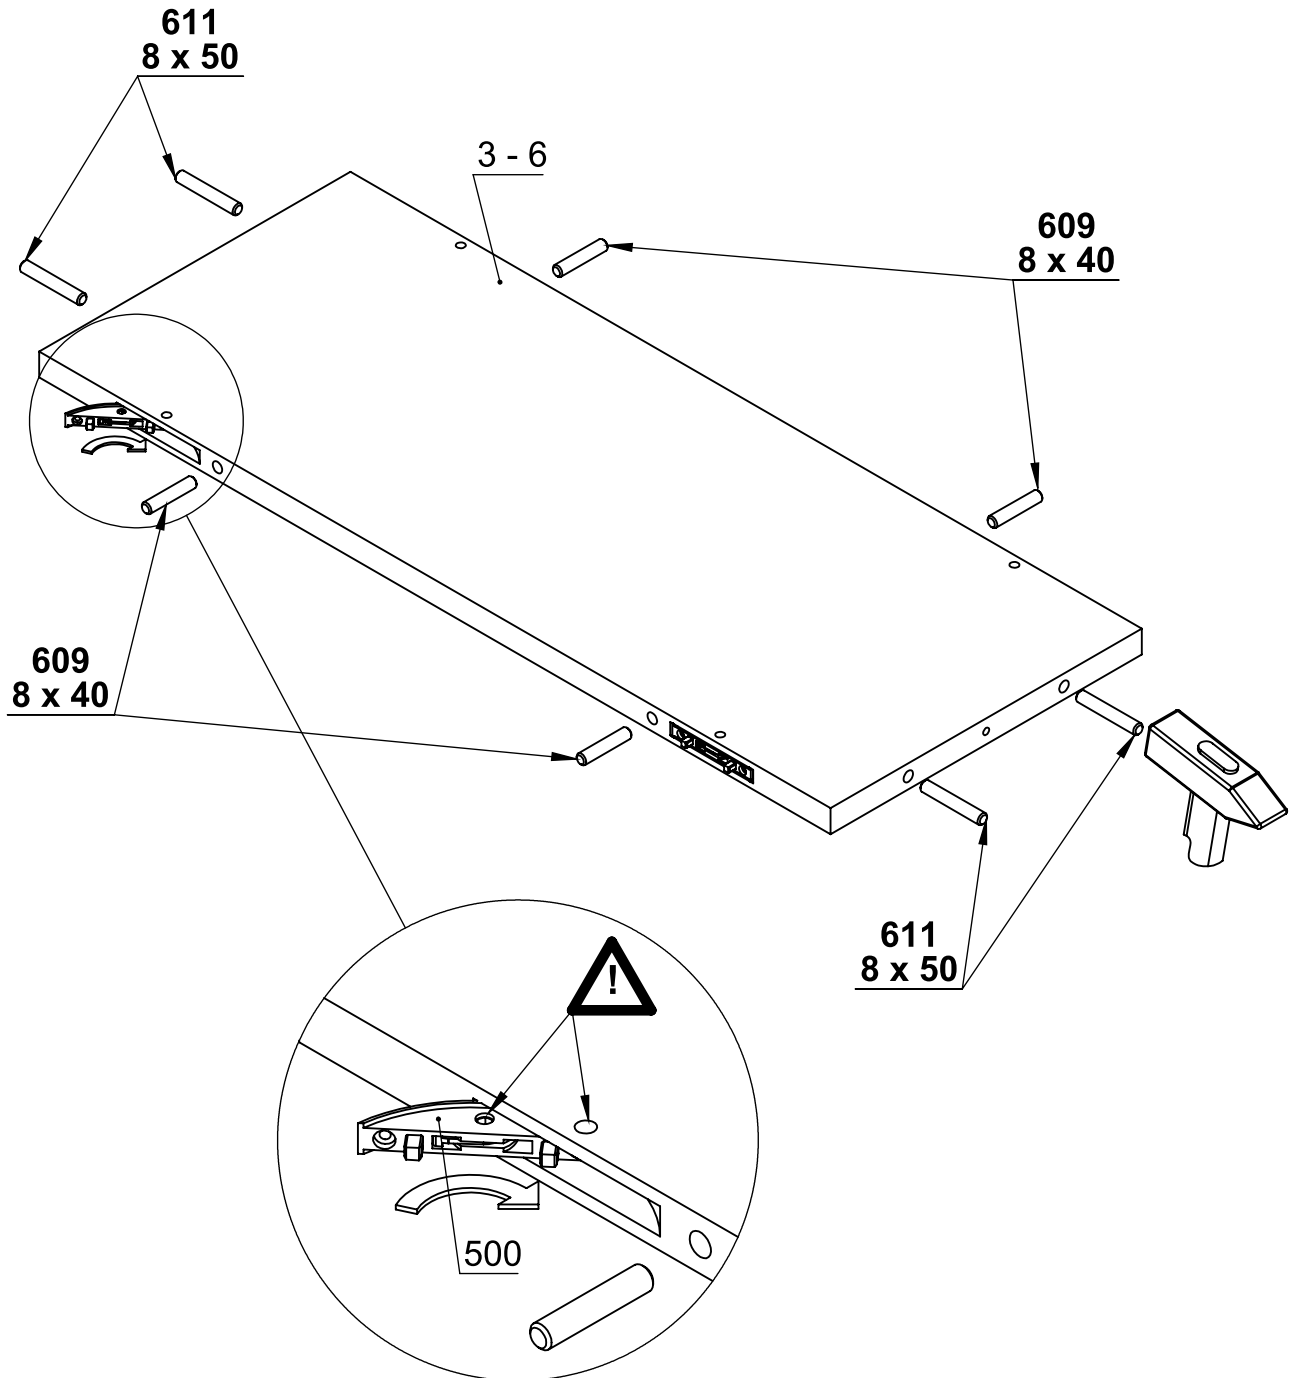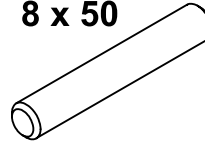


2.



7 - 10

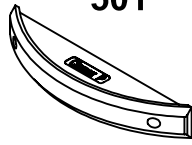


501

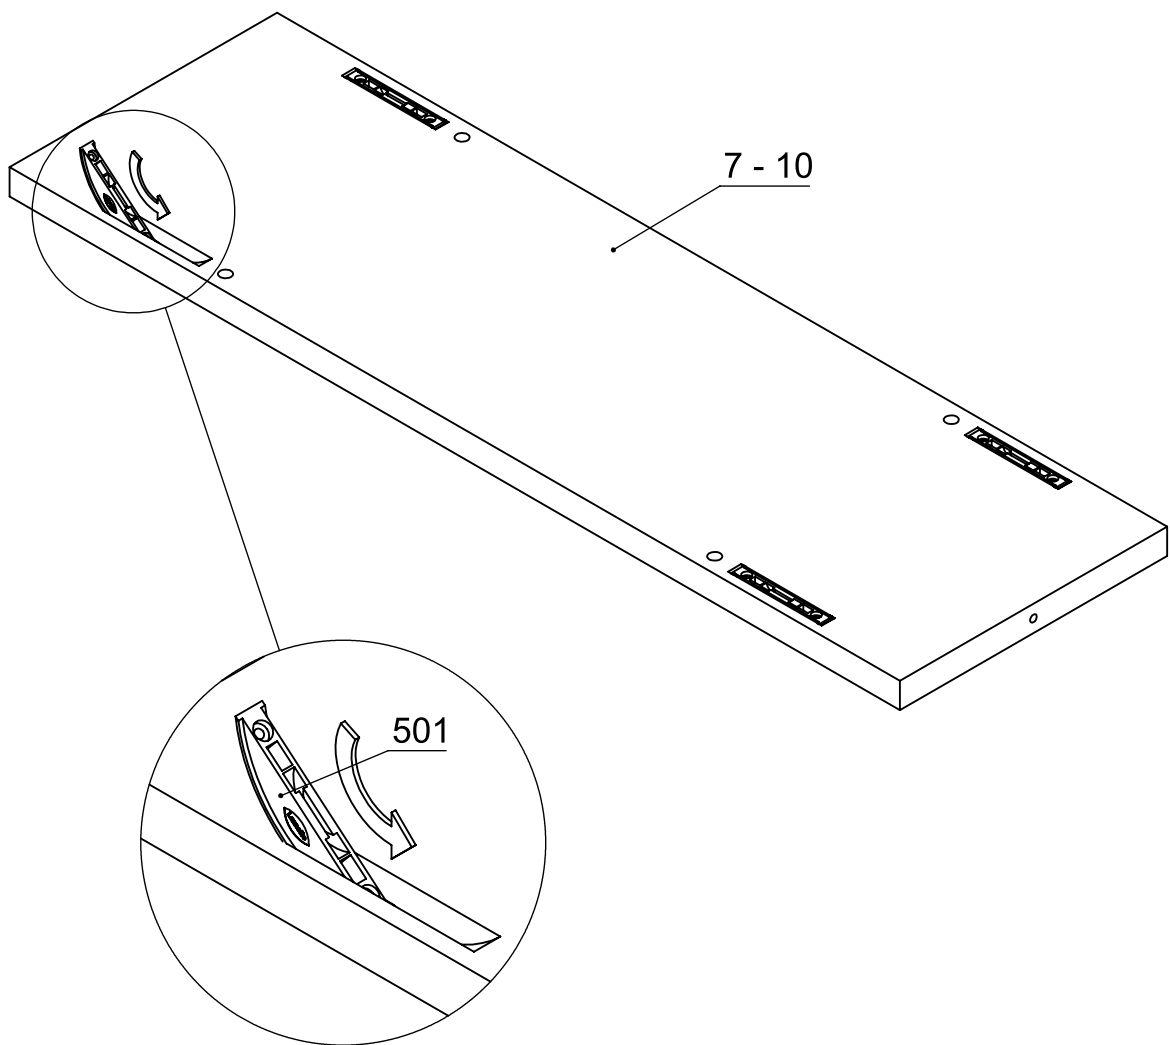

7 - 10

501


3.






3 - 6




7 - 10

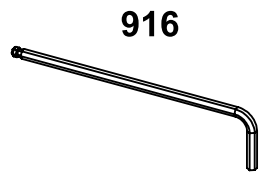

916

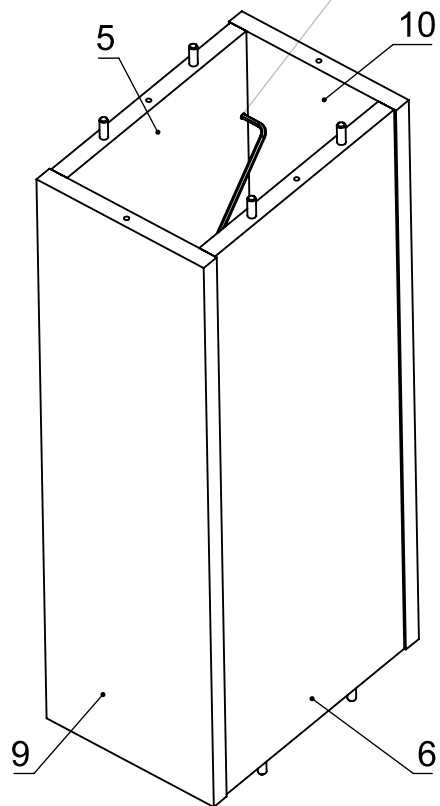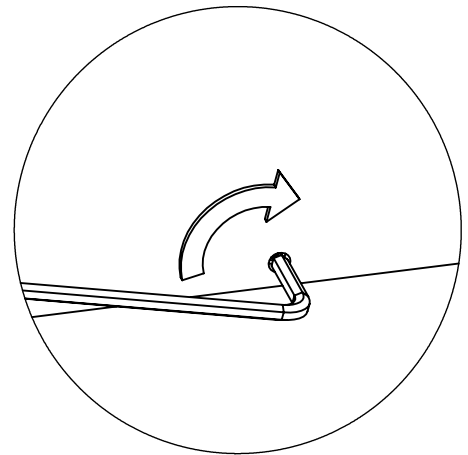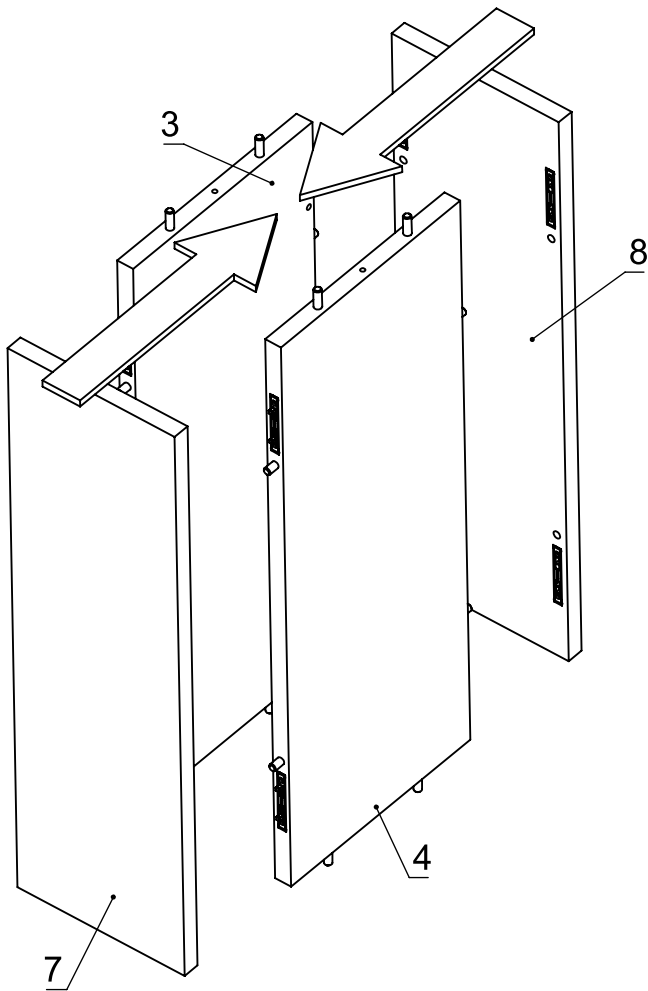


4.


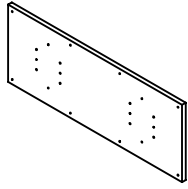


2


508
7 x 60

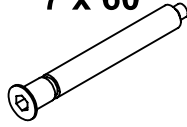

916

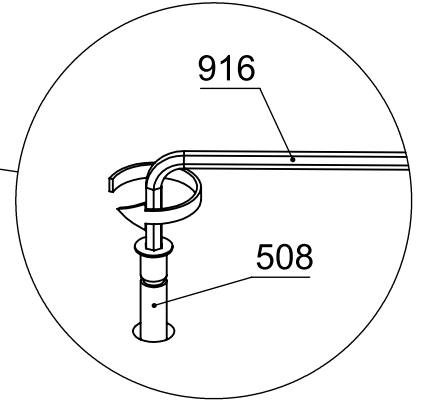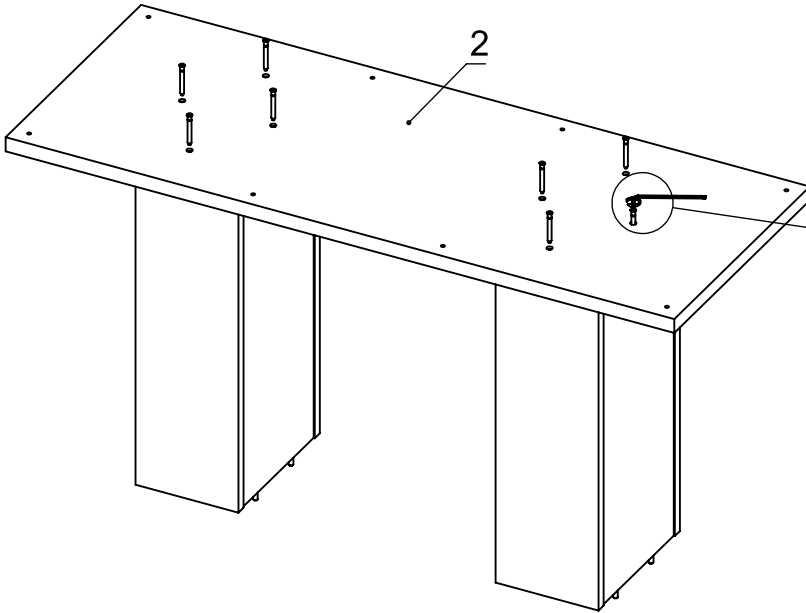


5.

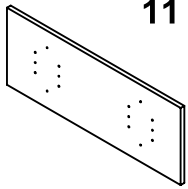

11






508
7 x 60




801



916

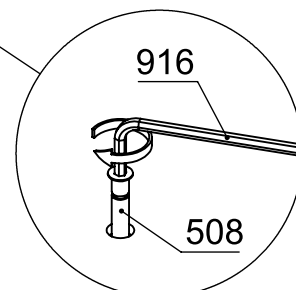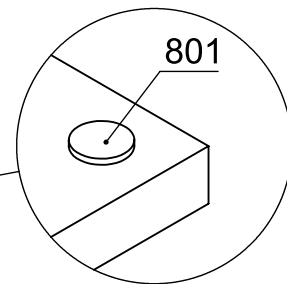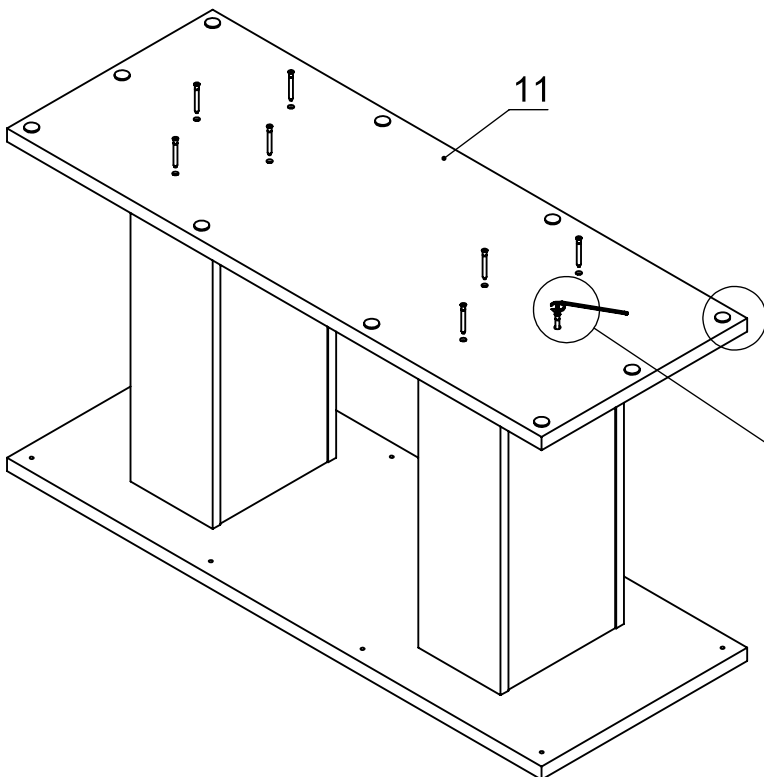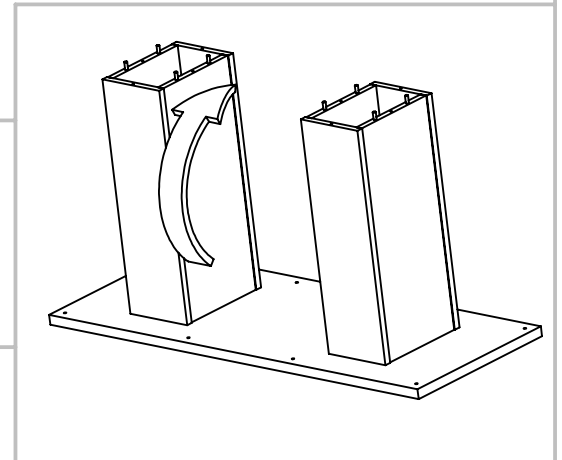


6.

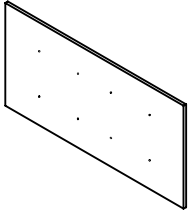

1

504
7 x 50

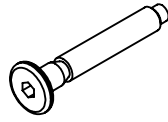

916

